

UCOM

COCOON 1150 COMBO

CORDLESS PHONE



USER GUIDE

1.7 - 08/08



Thank you for purchasing this new digital cordless telephone

Intended Purpose:

This product is intended to be connected indoor to a analogue telephone line.

You have acquired a Cocoon 1150 Combo, which is a product made in accordance with the Digital

Enhanced Cordless Telecommunications (DECT). DECT technology is characterized by high-security protection against interceptions as well as high-quality digital transmission. This telephone was designed for a wide range of applications. For example, this telephone can be used within a network of base units and handsets, constituting a telephone system which:

- Operates up to 4 handsets at one base unit.
- Allows an intercom between 2 handsets.
- Allows the operation of a handset at up to 4 base units.

Caller ID is a network provider service. After subscribing to Caller ID, this phone will display the caller's phone number.

Important

To use 'Caller ID' (display caller), this service has to be activated on your phone line.



Normally you need a separate subscription from your telephone company to activate this function. If you don't have the Caller ID function on your phone line, the incoming telephone numbers will not be shown on the display of your telephone.

The CE symbol indicates that the unit complies with the essential requirements of the R&TTE directive.

The features described in this manual are published with reservation to modifications.



This product works with rechargeable batteries only. If you put non-rechargeable batteries in the handset and place it on the base, the handset will be damaged and this is NOT covered under the warranty conditions.

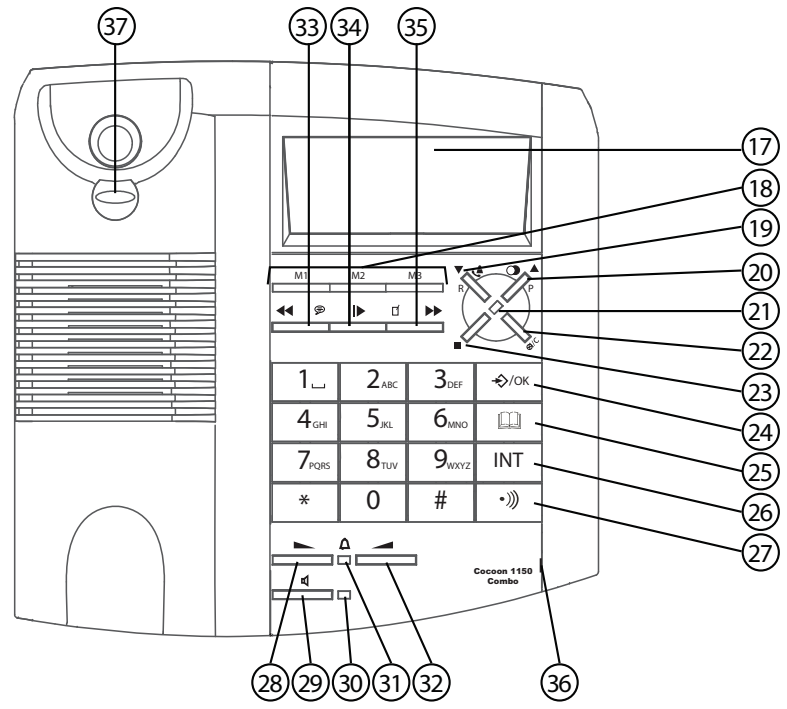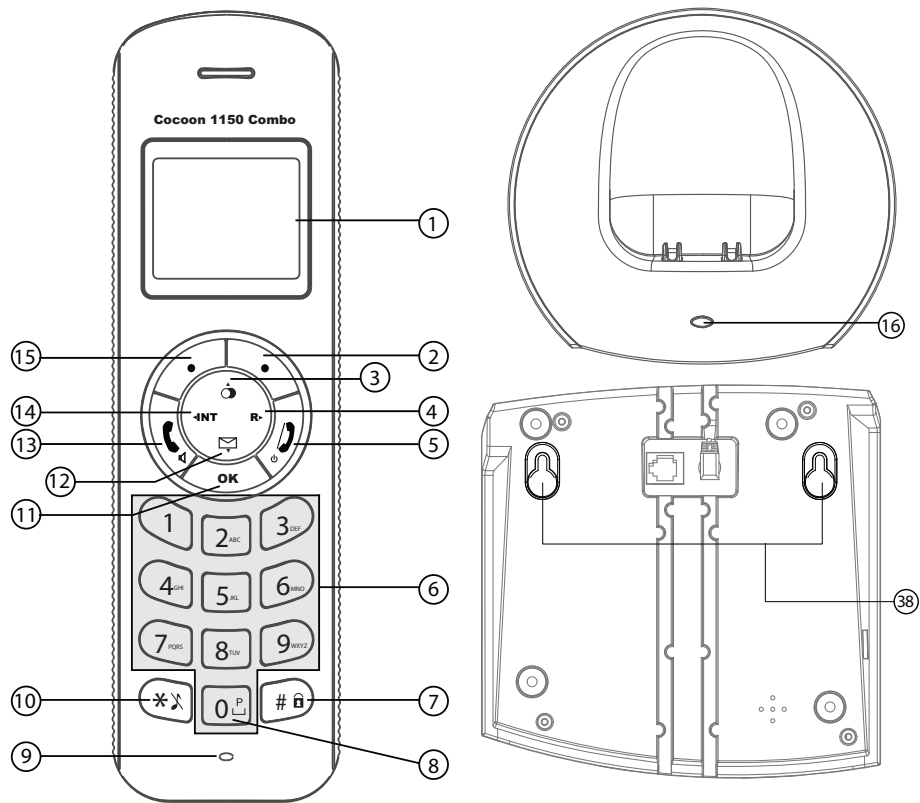

1	Safety advice	6
2	Disposal of the device (environment)	7
3	Cleaning	7
4	Installation	7
4.1	Installing the base	7
4.2	Handset charger	8
4.3	Installing the batteries	8
5	Getting to know your telephone	9
5.1	Keys / LED	9
5.2	Display (LCD)	11
5.3	Navigating the menu	12
6	Handset operation	14
6.1	Turning the handset on/off	14
6.2	Setting the language	14
6.3	Making Calls	14
6.4	Receiving a Call	15
6.5	Redial list options	16
6.6	Activate / deactivate handsfree function	16
6.7	'Out of range' warning	16
6.8	Setting the speaker volume	16
6.9	Call Duration Indicator on the Display	17
6.10	Turning off the microphone (mute)	17
6.11	Pause key	17
6.12	Using the alphanumeric handset keypad	17
6.13	Setting the ring volume level on the handset	17
6.14	Setting the ringer melody on the handset	18
6.15	Locking the key pad	18
6.16	Turning key click on/off	18
6.17	Display contrast	19
6.18	Changing the handset name	19
6.19	Auto answer	19
6.20	Default reset (Handset reset)	19
6.21	Using the alarm feature	20
6.22	The handset phonebook	20
6.23	Tools	23
7	Additional handsets and bases	23
7.1	Adding a new handset	23
7.2	Removing a handset	24
7.3	Selecting a base unit	24
7.4	Making internal calls	25
8	Caller ID / CLIP	26
8.1	The call list	26
8.2	Calling a number from the call list	27
8.3	Storing a number from the call list in the phonebook or under M1..M3	27
8.4	Deleting numbers from the call list	28

9	Voice mail indicator	28
10	The base phonebook and direct memory keys (M1,M2,M3)	29
10.1	Adding a number and a name to the phonebook	29
10.2	Adding a number and name to the direct memory keys M1, M2 and M3	29
10.3	Looking up a number in the phonebook	29
10.4	Changing a name or number in the phonebook	29
10.5	Deleting one or all entries from the phonebook	29
10.6	Copy a phonebook entry to another handset or base	30
10.7	Copy all phonebook entries to another handset	30
10.8	Add all phonebook entries to the phonebook of another handset	30
11	Base operation	31
11.1	Setting the language	31
11.2	Making Calls	31
11.3	Receiving a call	32
11.4	Activate / deactivate handsfree function	32
11.5	Setting the handset speaker volume	33
11.6	Call duration indicator on the display	33
11.7	Turning off the microphone (mute)	33
11.8	Pause key	33
11.9	Locating a misplaced handset (paging)	33
11.10	Using the alphanumeric keypad	33
11.11	Setting the ring volume level of the base	34
11.12	Setting the ringer melody of the base	34
11.13	Turning key click on/off	34
11.14	Display contrast	35
11.15	Default reset (base reset)	35
11.16	Setting the clock	35
11.17	The R key (flash)	36
11.18	Changing the PIN code (system PIN code)	36
11.19	Setting the dialing mode	37
11.20	Removing a handset	37
11.21	Change the base character set	37
12	Answering machine	37
12.1	LCD display	37
12.2	Base key functions	38
12.3	Outgoing messages	38
12.4	Turning answering machine on/off	39
12.5	Setting number of rings	39
12.6	Changing the language of the answering machine	39
12.7	Programming the VIP code	39
12.8	Operation	40
12.9	Recording a memo	40
12.10	Playback of incoming messages and memos	40
12.11	Erasing messages	40
12.12	Memory full	41
12.13	Remote operation	41
12.14	Turning answering machine on remotely	42

13	Wall mounting	42
14	Trouble shooting	43
15	Technical characteristics	44
16	Warranty	44
16.1	Warranty period	44
16.2	Warranty handling	45
16.3	Warranty exclusions	45
17	Service address and support	45
18	Declaration of conformity and manufacturer	45

1 Safety advice

The following safety advice must always be followed before using electrical equipment. Please read carefully through the following information concerning safety and proper use. Make yourself familiar with all the functions of the equipment. Be careful to keep these advice notes and if necessary pass them on to a third party.

Electrical safety and protection

- Do not operate the equipment if the mains plug, cable or the equipment itself is damaged.
- If the equipment is dropped, then it must be checked by an electrician before further use.
- Dangerous voltages are present inside the equipment. Never open the housing or insert objects through the ventilation holes.
- Do not allow liquids to get into the equipment. In case of emergency, pull out the plug from the socket.
- Similarly, if a fault develops during use or before you start to clean the equipment, pull the plug out if the socket.
- Do not touch the charger and plug contacts with sharp or metal objects.
- Do not carry out any modifications or repairs to the equipment yourself. Have repairs done to the equipment or the mains cable only by a specialist service centre. Unsatisfactory repairs can lead to considerable danger for the user.
- Children frequently underestimate the dangers associated with electrical equipment. Therefore you must never leave children unsupervised in the vicinity of electrical equipment.
- The equipment is not to be used in a damp room (e.g. bathrooms) or rooms where there is a lot of dust.
- Equipment connected to the mains during a thunderstorm can be damaged by lightning. Therefore you should pull the plug out of the mains socket during a storm.
- To completely disconnect the equipment from the electricity supply, the plug must be removed from the socket. When doing this always pull on the plug itself and never on the cable.
- Protect the mains cable from hot surfaces or other sources of damage and do not allow it to become constrained.
- Check the mains cable regularly for any damage.
- Unwind the mains cable completely before use.
- Make sure that the mains cable does not represent a trip hazard.
- The operation of some medical devices may be affected.
- The handset may cause an unpleasant buzzing sound in hearing aids.

Fire safety

- The heat accumulated inside the equipment can lead to the defect and/or to the fire of the equipment. Do not expose this equipment therefore to extreme temperature like:
 - direct sun exposure and heater warmth
 - ventilation holes may not be covered

Danger of explosion

- Never throw batteries in fire.

Poisoning danger

- Keep batteries away from small children.

Note

- Only use the charger plug supplied. Do not use other chargers, as this may damage the batteries cells.
- The wall outlet for the power supply must be close and accessible.
- Only use rechargeable batteries of the same type. Place the batteries with correct polarity inside the battery compartment (polarity is marked inside the handset). Never use normal un rechargeable batteries!



As this telephone cannot be used in case of a power cut, you should use a mains-independent telephone for emergency calls, e.g. a mobile phone.

2 Disposal of the device (environment)



At the end of the product lifecycle, you should not throw this product into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipments. The symbol on the product, user guide and/or box indicate this.

Some of the product materials can be re-used if you bring them to a recycling point. By re-using some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

3 Cleaning

Clean the telephone with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

4 Installation




Before you use the telephone for the first time, you must first make sure the batteries are charged. If not, the telephone will not work optimally.

4.1 Installing the base

For installation, do the following:


- Plug one end of the adaptor into the 230V outlet and the other end into the adapter jack on the bottom of the base.
- Connect one end of the telephone cord with the wall phone jack and the other end to the bottom of the base. Use the included telephone cord.

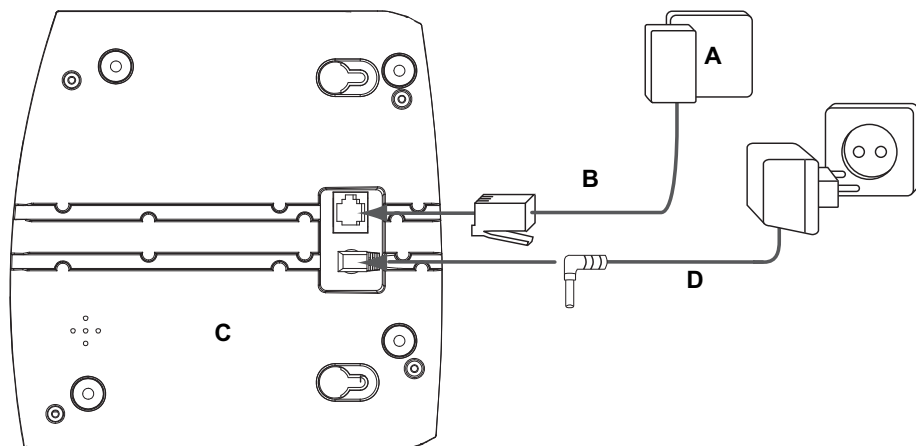

- Base -
- A. Telephone wall outlet
 - B. Telephone cord
 - C. Bottom view of the base
 - D. Power adaptor with cable
 - E. Base handset connection

4.2 Handset charger


Plug the mains adapter into the socket.

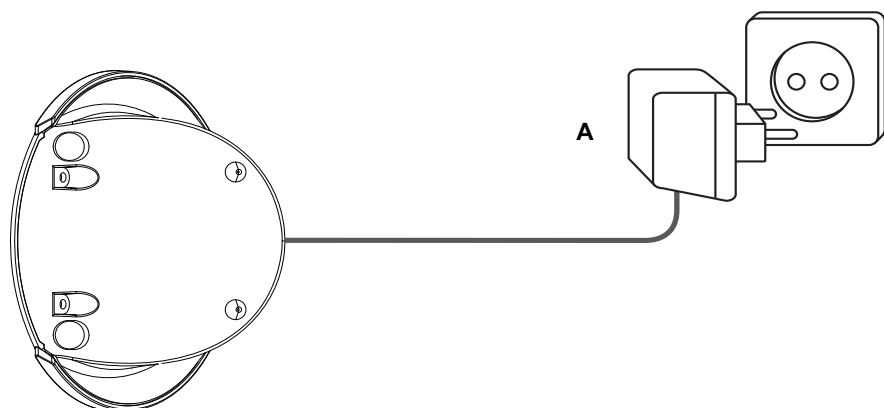

- Charger -
- A. Mains adapter with cable

4.3 Installing the batteries

- Open the battery compartment (see below).
- Insert the batteries **respecting the (+ and -) polarity**.
- Close the battery compartment.
- Leave the handset on the charger unit for 16 hours. The handset charging indicator (LED) ⑯ on the handset charger unit will light up.

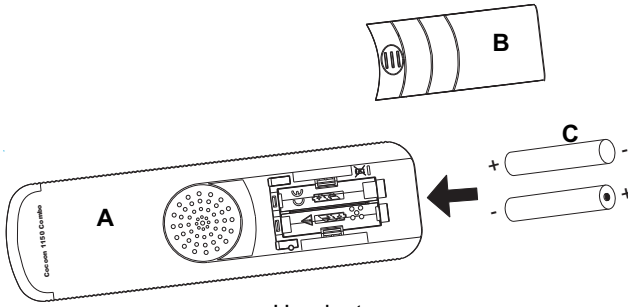


- Handset -
 A. Back view of handset
 B. Battery cover
 C. Rechargeable Batteries

5 Getting to know your telephone

5.1 Keys / LED


5.1.1 Handset

1. Display
2. Right menu key
3. Up / Redial key
4. Right / Flash key
5. On hook / Off key
6. Alphanumeric keys
7. Keypad lock key / #
8. **0** / Pause **P** / Space key
9. Microphone
10. Ringer volume off / *
11. OK key
12. Down / Call log key
13. Off hook / On / Handsfree key
14. Left / Internal key
15. Left menu key

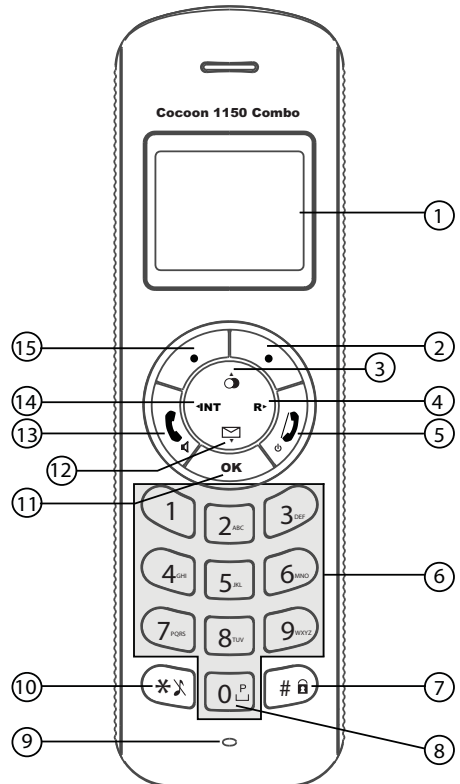



5.1.2 Handset Charger

16. Handset charging indicator

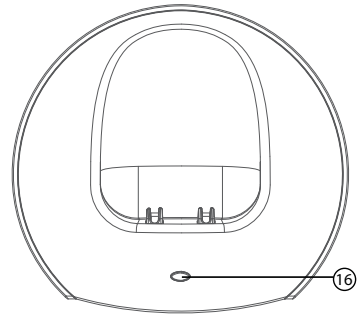

5.1.3 Base

 
- 17. LCD display
- 18. Direct memory keys (M1..M3)
- 19. Down / CallerID / Flash key
- 20. Up / Pause / Redial key
- 21. Handset in use LED
- 22. Delete / Mute key
- 23. Stop / Answering On-Off / Escape key
- 24. Menu / OK key
- 25. Phonebook / Dial key
- 26. Internal call key
- 27. Paging key
- 28. Speaker / Ring volume -
- 29. Speaker key
- 30. Speaker LED
- 31. Ring LED
- 32. Speaker / Ring volume +
- 33. Left / OGM / Rewind key
- 34. Play / Pause key
- 35. Right / Memo / Forward key
- 36. Hands free / Answering machine microphone
- 37. Wall mounting hook
- 38. Wall mounting locations

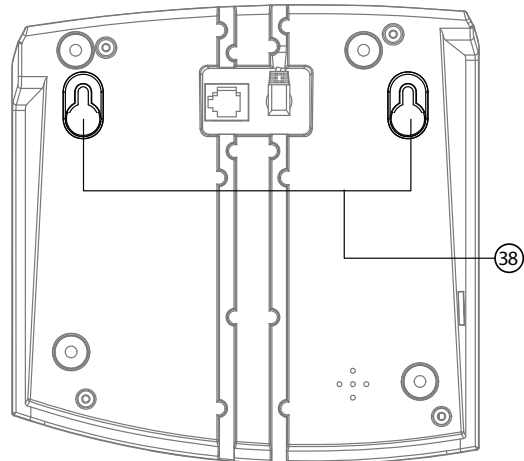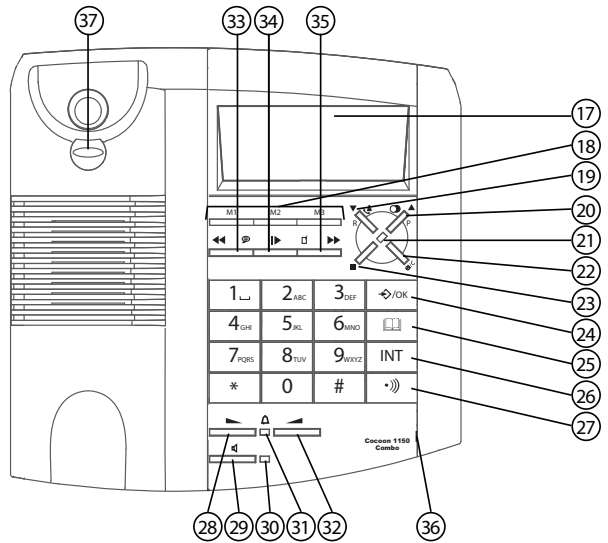

 
5.2 Display (LCD)

5.2.1 Handset

 
Icon line



Text lines



Soft menu / Option menu line



Battery indicator

- The battery is fully charged
- The battery is 25% drained
- The battery is half drained (50%)
- The battery is 75% drained
- The battery is low. You will hear warning signals and the battery symbol on the display will blink.

Icons

	On hook
	Off hook
	Ringing
	Internal communication
	Handsfree speaker ON
	Keypad locked
ABC	Upper case
abc	Lower case
	Direction to other menu points
	Call log entries* (steady) - New unanswered calls (blinking)
	New voice mail message
	Handset ringer off
	Alarm set
Y	In range (steady) - Out of range (blinking) ⁱ

* Only when Caller ID is activated on your telephone line.

Display keys

Display keys (soft keys) are located directly under the display . The function of these 2 keys changes depending on the operation mode. The actual function is displayed as icon or text directly above the 2 display keys.



Phonebook



Mute



OK / Confirm



Back



Menu




"No" key







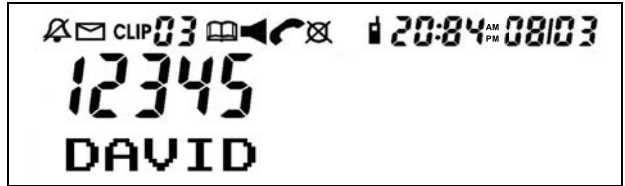


Delete

5.2.2 Base

 


Icons

	Ringer off
	New voice mail message
CLIP	Call log entries* (steady) New unanswered calls (blinking)
	Phonebook
	Handsfree speaker ON
	Off-hook by base
	Microphone muted
	Internal communication
AM PM	Morning / afternoon (12 hours mode)

* Only when Caller ID is activated on your telephone line.

Base LED



Handsfree activate




Blinks during incoming call


 



Blinks when cordless handset is in use

5.3 Navigating the menu

5.3.1 Handset

The handset has a menu system which is easy to use. Each menu leads to a list of options. When the handset is switched On and in standby, press the left menu key (15) under  to open the main menu.

Press the up key  (3) or the down key  (12) key to scroll to the menu option you want. Then press  (2) to select further options or confirm the setting displayed.



Exit or go back one level in the menu

To go to the previous level in the menu, press (15).

To cancel and return to standby at any time, press the (5) key. If no button is pressed for 20 seconds, the handset returns to standby automatically.

Handset Menu overview

Menu	Submenu items
Phonebook	
Handset	Ring Tone Ringer Volume Handset Name Keypad Beep Contrast Auto Talk Select Base Language Registration
Time	Set Alarm
Tools	Appointment Stop Watch

5.3.2 Base

When the menu button (24) is pressed on the base, the first menu option is displayed. Press up or down to scroll in the menu. Press (24) to go to the next sub menu or to confirm the setting. Press the Stop/Esc (23) key to go back to the previous level in the menu. If no button is pressed for 20 seconds, the base returns to standby automatically.

Base Menu overview



Menu	Submenu items
Ans Machine	Answer Mode Answer Delay Del. All Msgs Remote PIN Language
Phonebook	
Ringer Tone	Ext Melody INT Melody Volume
Key Tone	On Off
Display	Contrast Language

Menu	Submenu items
Settings	Change Case Dial Mode Recall System PIN
Time	Date & Time Format
Remove HS	
Reset	

6 Handset operation

This part only describe the cordless handset functions (how to set up a call, receive a call and do different settings). For the base operation and answering machine see “11 Base operation”.










 

6.1 Turning the handset on/off

- To turn the handset on, press the on key  (13).
- To turn the handset off, press and hold down the off key  (5), till the handset switches off.

6.2 Setting the language




The telephone has 15 display languages.

To set the language:



- Press the option button under  (15).
- Press the up or down key  (3)/ (12) repeatedly until ‘Handset’ is selected
- Press  (2) to confirm.
- Press the up or down key  (3)/ (12) repeatedly until ‘Language’ is selected
- Press  (2) to confirm.
- The language set appears on the display.
- Press the up or down key  (3)/ (12) repeatedly to select the language you would like to use.
- Press  (2) to confirm your selection or press  (15) to leave the menu without saving.



6.3 Making Calls

6.3.1 External Call


 
- Press the off hook key  (13).
- ‘Line is use’ on the base will be shown and the call symbol  appear on the handset display.
- You will hear the dial tone. Dial the telephone number.
- The number appears on the display and is dialed.
- After finishing your call, press the on hook key  (5) to hang up.

6.3.2 Number preparation


 



- Dial the telephone number you wish to call. You can correct the number by pressing the  (15) key.
- Press the off hook key  (13).

- 'Line is use' on the base will be shown and the call symbol  appear on the handset display.
- The telephone number is dialed automatically.
- After finishing your call, press the on hook key  (5).

6.3.3 Redialing the last number dialed

- Press the redial key  (3).
- Press the off hook key  (13).
- The number you last called is dialed automatically.


 



6.3.4 Redial one of the last 10 numbers dialed

- Press the redial key  (3).
- The number you last called appears on the display.
- Press the up or down key  (3) /  (12) a few times until the desired number appears on the display.
- Press the off hook key  (13).
- The number shown on the display is dialed automatically.
- After finishing your call, press the on hook key  (5) or put the handset back on the charger to hang up.

6.3.5 Calling a programmed number from the phonebook

 


The telephone has a phonebook in which you can store telephone number with name. (See also "6.22 The handset phonebook".)


To call a number from the phonebook:

- Press the phonebook key  (2).
- The first number of the phonebook appears on the display.
- Press the up or down key  (3) /  (12) repeatedly to select the telephone number you want to call.
- Press the off hook key  (13).
- The number shown on the display, is dialed automatically.
- After finishing your call, press the on hook key  (5) or put the handset back on the charger to hang up.

6.4 Receiving a Call


During internal or external incoming call, the handset will start to ring. You can temporarily disable the handset ringing by pressing the option key 'Silent' (15).




- All subscribed handsets will ring when you receive a call.
- The call symbol  blinks on the display.
- The telephone number of the caller appears on the display if you have Caller ID service (CLIP). Consult your telephone company. The name of the caller also appears on the display if:
 - the number is programmed into the phonebook with name
 - the network sends the name together with the telephone number
- Press the off hook key  (13) to accept the external call.
- **OR** Lift the handset off the charger (if the auto answer option is active, see "6.19 Auto answer").
- During the conversation the off hook symbol  appear on the display and the call timer starts to run.

- After finishing your call, press the on hook key  ⑤ to hang up or put the handset back on the charger.


6.5 Redial list options


When scrolling through the redial list (see “6.3.4 Redial one of the last 10 numbers dialed”). You have the following options:

When the desired number is shown on the display press ‘Option’ ② and select with the up and down keys  ③/⑫ the following options:

- ‘Delete’: to delete an entry in the redial list. Press  ② to confirm.
- ‘Save number’: to store the number into the phonebook memory. Press  ② to confirm. Enter a name (see “6.22.1 Adding a number and a name to the phonebook”) and press ‘Save’ ②. Edit the number and press ‘Save’ ② again. Select the desired melody and press ‘Save’ ② to confirm.
- ‘Delete all calls’: to delete all entries in the redial list. Press  ② to confirm.

6.6 Activate / deactivate handsfree function

This function allows you to communicate without having to pick up the handset. When you are talking, press the handsfree key  ⑬ to activate the handsfree function.

Press the  ⑬ button again to deactivate the handsfree function.





When you are calling in handsfree mode and you want to change the volume, press up or down key  ③/⑫ repeatedly.




When you use the handsfree function for a long time, the batteries will drain quickly !

6.7 ‘Out of range’ warning

If the handset is out of range of the base unit:

- ‘Searching’ appears on the display and the out of range symbol  blinks on the display.
- Move closer to the base unit.
- As soon as you are back within range of the base unit, the symbol  stops blinking.

6.8 Setting the speaker volume

Use the up and down keys  ③/⑫ during conversation to set the volume of the speaker. You can select from 5 levels. The telephone is set to level ‘3’ by default:

 ‘Volume 1’

 ‘Volume 2’

 ‘Volume 3’

 ‘Volume 4’

 ‘Volume 5’



The handsfree volume can be set the same way as above!


6.9 Call Duration Indicator on the Display

During an external call, the call duration is shown on the display:

E.g. "01:10:40" for 1 hour , 10 minute and 40 seconds.

The call duration remains visible on the display for 2 seconds after each call.

6.10 Turning off the microphone (mute)


 
To turn off the microphone during a call press the menu key  (15). Now you can speak freely without the caller being able to hear you. To activate the microphone again, press the option key 'Off' (15).

6.11 Pause key

If you dial a telephone number and you would like to add a pause to this number, press the Pause key **P** (8) at the desired place in the number until 'P' appears in the display. When you dial or redial this number, the pause (3 seconds) is automatically included.

6.12 Using the alphanumeric handset keypad

Use the alphanumeric keypad to type text. To select a letter, press the corresponding alphanumeric key (6). E.g. if you press the alphanumeric key '5', the first character 'J' appears on the display. Press it repeatedly to select other characters from this key.


Press the '2' key once to select the letter 'A'. If you would like to select both 'A' and 'B' after each other, first press the '2' key once to select 'A', wait 2 seconds until the cursor moves to the next position and then press the '2' key twice to select 'B'. You can delete characters mistakenly typed by using the Delete key  (15). The character in front of the cursor will be deleted. All characters can be deleted at the same time by pressing the Delete key  (15) for 2 seconds.

You can move the cursor by pressing the left and right keys **INT** (14)/**R** (4). You can switch between upper and lower case by pressing the ***A** (10) key. The upper right corner will show 'abc' for lower case and 'ABC' for upper case.

You can change the input character set from English (ABC) to Latin (AÁÀ), Greek (ABΓ) or Russian (AБB) by pressing and holding the # key (7) for 2 seconds.





 


 

6.13 Setting the ring volume level on the handset


You can change the ring volume of an incoming call (internal and external) between 6 levels (levels '1' to '5' and 'Off').

If you select level 'Off', the symbol  appears on the display. The handset will not ring when a call is received.

Level '5' is the highest level. The telephone is set to level '3' by default.

6.13.1 Setting the ring volume for Internal and external calls (0-5)

- Press the menu key (15) under .
- Press the up or down key  (3)/ (12) repeatedly until 'Handset' is selected.
- Press  (2) to confirm.
- Press the up or down key  (3)/ (12) repeatedly until 'Ringer volume' is selected.
- Press  (2) to confirm.
- The current volume is shown and hearable.
- Press the up or down key  (3)/ (12) repeatedly to select the desired volume.









 
 

- Press **'Save'** (2) to confirm your selection or press  (15) to leave the menu without saving.
 - **You can turn the handset ring volume off during ringing by pressing the option key 'Silent'.**
 - **By pressing the *∞ (10) key for 3 seconds you can disable the handset ringer. The ∞ symbol will appear on the display. To reactivate, press *∞ (10) key again for 3 seconds.**



6.14 Setting the ringer melody on the handset

You can change the ringer melody for an incoming call (internal or external). The unit has 18 ringer melodies to choose from ('1'-'18'). By default, the external ringer melody is set to '10' and the internal ring melody to '1'.



6.14.1 Setting a ringer melody for internal or external calls (1-18)

- Press the left menu key (15) under .
- Press the up or down key  (3)/ (12) repeatedly until **'Handset'** is selected.
- Press  (2) to confirm.
- Press the up or down key  (3)/ (12) repeatedly until **'Ringtone'** is selected.
- Press  (2) to confirm.
- Select **'External'** or **'Internal'** and press  (2).
- The current melody is shown and hearable.
- Press the up or down key  (3)/ (12) repeatedly to select the desired melody.
- Press **'Save'** (2) to confirm your selection or press  (15) to leave the menu without saving.


6.15 Locking the key pad

You can lock the keypad to prevent involuntary key presses. When the keypad is locked it is impossible to dial a telephone number, but you can still answer incoming calls.

To activate keypad lock:










- Press and hold the keypad lock key #  (7) for 3 seconds.
- **'Keypad locked'** and the icon  will appear on the display.

To deactivate keypad lock:

- Press **'Unlock'** (15) followed by the keypad lock key #  (7) to unlock the keypad again.








 
 

 
6.16 Turning key click on/off

You can set the handset to make a beep whenever you press a key.

- Press the left menu key (15) under .
- Press the up or down key  (3)/ (12) repeatedly until **'Handset'** is selected.
- Press  (2) to confirm.
- Press the up or down key  (3)/ (12) repeatedly until **'Keypad Beep'** is selected.
- Press  (2) to confirm.
- Select
 - **'On'**: turn on key click
 - **'Off'**: turn off key click
- Press  (2) to confirm your selection or press  (15) to leave the menu without saving.









6.17 Display contrast

To change the display contrast:

- Press the left menu key (15) under .
- Press the up or down key  (3)/ (12) repeatedly until 'Handset' is selected.
- Press  (2) to confirm.
- Press the up or down key  (3)/ (12) repeatedly until 'Contrast' is selected.
- Press  (2) to confirm.
- Select the contrast with the up or down key  (3)/ (12).
- Press  (2) to confirm your selection or press  (15) to leave the menu without saving.









6.18 Changing the handset name

You can change the handset name displayed on the handset during standby (max. 8-12 characters).

- Press the left menu key (15) under .
- Press the up or down key  (3)/ (12) repeatedly until 'Handset' is selected.
- Press  (2) to confirm.
- Press the up or down key  (3)/ (12) repeatedly until 'Handset name' is selected.
- Press  (2) to confirm.
- Press  (15) to delete each letter of the name and use the alphanumeric keypad to enter the correct name.
- Press 'Save' (2) to set the new handset name.

6.19 Auto answer


 
When there is an incoming call and the handset is on the base, the phone automatically takes the line when lifted. This function can be turned on or off.

- Press the left menu key (15) under .
- Press the up or down key  (3)/ (12) repeatedly until 'Handset' is selected.
- Press  (2) to confirm.
- Press the up or down key  (3)/ (12) repeatedly until 'Autotalk' is selected.
- Press  (2) to confirm.
- Select 'On' or 'Off' and press  (2) to confirm.

6.20 Default reset (Handset reset)

You can restore all handset settings back to default and erase all phonebook, call log, VIP list and redial entries.

To restore the default settings:

- Press the flash key **R** (4) for about 10 seconds until 'Handset reset?' appears.
- Press  (2) to confirm or  (15) to leave the menu without saving.


The default settings are:

Base select:	Auto select
Key beep:	On
External melody:	Melody 10
Internal melody:	Melody 1
Ringer volume:	Volume 3
Earpiece volume:	Volume 3









 


Handsfree:	Volume 3
LCD contrast:	6
Handset name:	Handset
Phonebook:	Empty
Call log:	Empty
Redial list:	Empty
Auto answer:	Off

6.21 Using the alarm feature

Set the date and time (See “11.16 Setting the clock”) and use your handset to give you a reminder alarm. You can have different alarm settings for each handset registered to your base. The alarm rings only at the handset, not at the base or any other handset.





If one of the alarms is set, the alarm set icon  appears in standby mode on the display.


6.21.1 Set the alarm

- Press the left menu key  (15) under .
- Press the up or down key  (3)/ (12) repeatedly until ‘Time’ is selected.
- Press  (2) to confirm.
- Press the up or down key  (3)/ (12) repeatedly until ‘Set Alarm’ is selected.
- Press  (2) to confirm.
- Press the up or down key  (3)/ (12) repeatedly and select one of the 4 types of settings: ‘Once’, ‘On Daily’, ‘Mon to Fri’ or ‘Off’. Confirm with  (2). If you choose ‘Once’, ‘On Daily’ or ‘Mon to Fri’ the display will show:



Time 24hr:

07:00

Enter the time when you want the telephone to ring and confirm by pressing ‘Save’  (2). Press the up or down key  (3)/ (12) repeatedly and select one of the 18 alarm melodies and confirm by pressing ‘Save’  (2).

- To deactivate the Alarm function, select ‘Off’ and confirm with  (2).








6.21.2 Turn off the alarm

- When the alarm goes off, press the left menu key  (15) under ‘Stop’ to deactivate the alarm.
- Press the right menu key  (2) under ‘Snooze’ to repeat the alarm function in 5 minutes.





6.22 The handset phonebook

The phonebook allows you to memorise 200 telephone numbers and names. You can enter names of up to 16 characters length and numbers of up to 24 digits length.









6.22.1 Adding a number and a name to the phonebook

- Press the phonebook option key  (2).
- Press ‘Option’  (2), select ‘New entry’ and press  (2) to confirm.
- ‘Name:’ appears on the display. Enter the name using the alphanumeric keys.
- Press ‘Save’  (2) and enter the telephone number.
- Press ‘Save’  (2) and select a melody.
- Press ‘Save’  (2) to store the record in the phonebook or press  (15) to cancel.



 



6.22.2 Looking up a number in the phonebook

- Press the phonebook option key  (2).
- Enter the first letter of the desired name via the alphanumeric keypad.
- The first name in the list with this letter appears on the display.
- Press the up or down key  (3)/ (12) to browse for other numbers in the phonebook.
- If the desired number appears on the display, the number will be automatically dialed by pressing the off hook key  (13).




6.22.3 Changing a name or number in the phonebook

- Press the phonebook option key  (2).
- Enter the first letter of the desired name. The first name in the list with this letter appears on the display. Press the up or down key  (3)/ (12) to browse and select the entry in the phonebook.
- Once the desired number appears on the display, press 'Option' (2).
- Press the up or down key  (3)/ (12) and select 'Edit entry'. Press  (2) to confirm.
- Press  (15) to delete each letter of the name and use the alphanumeric keypad to enter the correct name.
- Press 'Save' (2).
- Press  (15) to delete each number one by one and use the keypad to enter the correct number.
- Press 'Save' (2) and choose a ringer melody.
- Press 'Save' (2) to save the changes made.


 
 





6.22.4 Deleting one or all entries from the phonebook

- Press the right menu key  (2).
- Enter the first letter of the desired name via the alphanumeric keypad or press the up or down key  (3)/ (12) to browse and select the entry in the phonebook.
- Once the desired number appears on the display, press 'Option' (2).
- Press the up or down key  (3)/ (12) and select 'Delete Entry?'. Press  (2) to confirm.


 
 








OR

- Select 'Delete all' to delete all the entries and press  (2) to confirm.
- Select  (2) to validate or  (15) to cancel.

6.22.5 View name and number of an entry in the phonebook

- Press the right menu key  (2).
- Enter the first letter of the desired name via the alphanumeric keypad or press the up or down key  (3)/ (12) to browse and select the entry in the phonebook.
- Press 'Option' (2).
- Press the up or down key  (3)/ (12) and select 'Show details' and press  (2) to confirm.
- The name, telephone number and melody of the selected entry appear on the display.
- Press  (15) to go back to the list of entries or press  (2) to call the indicated telephone number.










6.22.6 Copy a phonebook entry to another handset or base

- Press the right menu key  (2).
- Enter the first letter of the desired name via the alphanumeric keypad or press the up or down key  (3)/ (12) to browse and select the entry in the phonebook.
- Press **'Option'** (2).
- Press the up or down key  (3)/ (12) and select **'Copy entry'** and press  (2) to confirm.
- The available handsets (all the handsets that are registered on the base) are shown including the base (= handset 0).
- Press the left or right key **INT** (14)/**R** (4) repeatedly to select the correct handset. Press  (2) to confirm.
- **'Copying to handset x'** appears on the display.
- **'Receive phonebook record?'** appears on the display of the destination handset or when it's to the base **'Receive PB?'** will be shown.
- On the destination handset / base, press  (2) /  (24) to confirm or  (15) /  (23) to cancel.


 







6.22.7 Copy all phonebook entries to another handset or base



By copying all entries from one handset to another, you will erase all existing records at the destination handset/base.

- Press the right menu key  (2).
- Press **'Option'** (2).
- Press the up or down key  (3)/ (12) and select **'Copy all'** and press  (2).
- The available handsets (all the handsets that are registered on the base) are shown including the base (=handset 0).
- Press the left or right key **INT** (14)/**R** (4) and select the correct handset. Press  (2) to confirm.
- **'Copying to handset x'** appears on the display.
- **'Receive all phonebook record?'** appears on the display of the destination handset or when it's to the base **'Receive All?'** will be shown.
- On the destination handset / base, press  (2) /  (24) to confirm or  (15) /  (23) to cancel.


 
 



 
 



 
 




6.22.8 Add all phonebook entries to the phonebook of another handset or base

- Press the right menu key  (2).
- Press **'Option'** (2).
- Press the up or down key  (3)/ (12) and select **'Copy append'** and press  (2).
- The available handsets (all the handsets that are registered on the base) are shown.
- Press the left or right key **INT** (14)/**R** (4) and select the correct handset. Press  (2) to confirm.
- **'Copying to handset x'** appears on the display.
- **'Receive Phonebook Record?'** appears on the display of the destination handset or when it's to the base **'Receive PB?'** will be shown.
- On the destination handset / base, press  (2) /  (24) to confirm or  (15) /  (23) to cancel.




 



6.23 Tools

6.23.1 Appointment

You can set 5 appointments or reminders which you can give a name and an alarm by date and time.

- Press the left menu key (15) under .
- Press the up or down key  (3)/ (12) repeatedly until **'Tools'** is selected and press  (2) to confirm.
- **'Appointment'** is selected. Press  (2) to confirm.
- Press the up or down key  (3)/ (12) to select one of the 5 appointments and press  (2).
- Press the up or down key  (3)/ (12) repeatedly until **'Edit'** is selected. Press the  (2) to change the appointment.
- Edit the name of the appointment and press **'Save'** (2).
- Enter the date of the appointment and press **'Save'** (2).
- Enter the time and press **'Save'** (2).
- Press the up or down key  (3)/ (12) to select the desired alarm melody and press **'Save'** (2) to validate.
- To delete the appointment: Press the up or down key  (3)/ (12) repeatedly until **'Delete'** is selected.
- Press  (2) to confirm or  (15) to cancel.

6.23.2 Stopwatch

- Press the left menu key (15) under .
- Press the up or down key  (3)/ (12) repeatedly until **'Tools'** is selected and press  (2) to confirm.
- Press the up or down key  (3)/ (12) repeatedly until **'Stopwatch'** is selected. Press  (2) to confirm.
- Press **'Start'** (2) to start the stopwatch. Press **'Stop'** (15) to stop the stopwatch. To restart the stopwatch press **'Start'** (15) again. Press **'Reset'** (2) to reset the counter to 00:00.


7 Additional handsets and bases

You can subscribe up to 4 handsets on one base. Each handset can register to 4 base stations and the user can select which base he wants to use. By default the handset 1 is registered to the base unit 1. Make internal calls between handset and base is also possible, the base uses handset '0' as internal number

7.1 Adding a new handset






 






This is only needed when you have deregistered a handset or when you bought a new one.

Keep the Paging key  (27) on the base unit pressed for 10 seconds until **'Register ...'** appears on the display and the LED (21) blinks. The base unit will stay in subscribing mode for 3 minutes.

Do the following to subscribe the handset:

- Press the left menu key (15) under .
- Press the up or down key  (3)/ (12) repeatedly until **'Handset'** is selected.

- Press  (2) to confirm.
- Press the up or down key  (3) /  (12) repeatedly until 'Registration' is selected.
- Press  (2) to confirm.
- Select 'Register' and press  (2).
- Select a base ('Basis 1'-'Basis 4') with the up and down keys  (3) /  (12) and press  (2).
- Enter the system PIN code (base PIN code; default '0000') and press  (2). In the display of the handset appears the reminder "Press the paging key on the base". Press the Paging key  (27) if you had not yet pressed it.
- The handset will now search for a base and register when found. The standby screen will appear when successfully registered and handset name and number will be shown.



Each handset can be subscribed to 4 different DECT base units. Each base unit is assigned a number from '1' to '4' in the handset. When you subscribe a new handset, you can assign a base unit number. It is best to use '1'.





 
 




7.2 Removing a handset

It is possible to cancel subscription of a handset to a base. You should do this if a handset is damaged and has to be replaced by a new one.


 
 





You can only cancel subscription of another handset, not the handset you are using to do the remove procedure.

On the handset

- Press the left menu key (15) under .
- Press the up or down key  (3) /  (12) repeatedly until 'Handset' is selected.
- Press  (2) to confirm.
- Press the up or down key  (3) /  (12) repeatedly until 'Registration' is selected.
- Press  (2) to confirm.
- Select 'De-register' and press  (2).
- Enter the system PIN code (base PIN code; default '0000') and press  (2).
- Select a handset you wish to remove by pressing the numerical keys ('1'-'4').
- Press  (2) to confirm.

On the base









- Press  / OK (24).
- Press the up or down key  (20) /  (19) to select 'Remove HS' and press  / OK (24).
- Enter the system PIN (default '0000') and press  / OK (24).
- Enter the handset number you want to remove and press  / OK (24).

7.3 Selecting a base unit

If your handset is subscribed to several base unit stations (max. 4), you must select a base unit because the handset can only communicate with one base unit at a time. There are two possibilities:

7.3.1 Automatic selection

If you set the handset to automatic delection, the handset will automatically choose the closest base unit in standby:










 

- Press the left menu key (15) under .
- Press the up or down key  (3)/ (12) repeatedly until 'Handset' is selected.
- Press  (2) to confirm.
- Press the up or down key  (3)/ (12) repeatedly until 'Select Base' is selected.
- Press  (2) to confirm.
- Select 'Auto' and press  (2) to confirm.



When you have activated Automatic base selection and the handset is out of range on the current base, the handset will only search for the strongest base in standby (not during communication).

7.3.2 Manual selection

If you set the handset to manual selection, the handset will only choose the base unit you have set.


- Press the left menu key (15) under .
- Press the up or down key  (3)/ (12) repeatedly until 'Handset' is selected.
- Press  (2) to confirm.
- Press the up or down key  (3)/ (12) repeatedly until 'Select Base' is selected.
- Press  (2) to confirm.
- Select 'Manual' and press  (2) to confirm.
- Select the base with the up and down key  (3)/ (12) and press  (2).





Before you can select a base unit, the handset must be subscribed to the base first.

7.4 Making internal calls

7.4.1 Call between handsets or handset and base

- Press the INT (14) (handset) or (26) (base) key.
- 'Internal_' appears on the handset display or 'Call Handset?' on the base display.
- Dial the number of the handset you would like to call (0 = base or handset 1-4).
- After finishing your call, press the on hook key  (5) to hang up.

7.4.2 Receiving an internal call

- The internal call icon  and the number of the handset calling, appear on the display.
- Go off hook to accept the internal call.
- During the call, the handset number of the caller and the symbol  appear on the display.

7.4.3 Receiving an external call during an internal call

If you receive an external call during an internal call between 2 handsets, you will hear a call waiting tone (knocking signal) on both handsets being used for an internal call.

- Go on hook to end the internal call.
- Go off hook to accept the external call.

7.4.4 Transferring a call to another handset

- You have an external caller on the line.
- Press the INT (14)/(26) key. 'Internal_' appears on the handset display or 'Call handset?' on the base display.
- Dial the number of the handset to which you would like to transfer the call.

- If the handset dialed answers, you can have an internal conversation. Go on hook and the external call is transferred.
- If the handset dialed does not answer, press the **INT** key $\textcircled{14}/\textcircled{26}$ to speak to the external caller again.

7.4.5 Conference call

Between two internal handsets and one external caller:

You can have a telephone conversation with one internal and one external caller at the same time.

- While on the line with an external caller, press the **INT** key $\textcircled{14}$. The external line is put on hold.
- Dial the number of the handset you would like to include in the call. You can toggle between internal and external line by pressing the **INT** key $\textcircled{14}$.
- Once the handset dialed answers, press the option key '**Conf.**' $\textcircled{2}$.
- Now you are connected to the external and the internal caller and you can talk to them at the same time (conference call).

Between base, one handsets and one external caller:

You can have a telephone conversation with the base, a handset and one external caller at the same time.

- While on the line with an external caller, press the **INT** key $\textcircled{14}/\textcircled{26}$. The external line is put on hold.
- Dial the number of the handset (Base = Handset 0) you would like to include in the call. You can toggle between Internal and External line by pressing the **INT** key $\textcircled{14}/\textcircled{26}$.
- Once the handset dialed answers press the option key '**Conf.**' $\textcircled{2}$ if the initial external call was with the handset

OR

- press and hold the **INT** $\textcircled{26}$ key at the base when the initial external call was made on the base.
- Now you are connected to the external and the internal caller and you can talk to them at the same time (conference call).

8 Caller ID / CLIP






You can only use this service when you have a Caller ID / CLIP subscription. Contact your telephone company for more information.

When you receive a call, the telephone number of the caller, the date and time appears on the handset and base display. If the name is programmed in the phonebook, the name in the phonebook is displayed!

8.1 The call list


The telephone can store 30 calls in a call list that can be reviewed later. When the memory is full, the new calls automatically replace the oldest calls in the memory.

For the handset: The icon  on the display blinks if there are new not answered calls in the call list. In the middle of the screen, next to the  icon, you can see the amount of new messages. If the call list is empty and you press the call log key $\textcircled{12}$, '**Call list empty**' will be shown.


For the base: The message 'X CLI' will appear together with a blinking icon 'CLIP' if there are new not answered calls in the call list. If the call list is empty and you press the call log key  (19), 'Empty' will be shown.

You can view the information of an incoming call:









 
 
For the Handset:

- Press the call log key  (12). The name (if sent by the network or present in the phonebook memory) of the caller will be shown on the first line. The telephone number of the caller on the 2nd line and date and time on the 3rd line. At the end of the 3rd line the following indication is shown:
 - 'New': Unread or unanswered call
 - 'Old': Read or answered call

For the Base:

- Press the call log key  (19). The name (if sent by the network or present in the phonebook memory) of the caller will be shown on the 2nd line. The telephone number of the caller on the 1st line and date and time on top of the display. If it's a unread or unanswered call 'CLIP' will blink on the display.




 


You can navigate through the call list of the base or the handset:

- Briefly press the call log key  (12) (handset) or  (19) (base) to view the most recent call.
- The telephone number and name of the most recent caller appears on the display.
- The date and time the call was received are linked to each call.
- Press the Up/down key  (3)/ (12) (handset) or  (20)/ (19) (base) to browse other numbers on the list.
- If neither the up or down key  (3)/ (12) (handset) or  (20)/ (19) (base) is pressed for 20-30 seconds, the telephone will return to standby mode.







 

- After a call is received, the number of the caller remains on the display for 8 seconds after the last ring.
- Caller ID is not available while you are on the line with a caller and there is a second incoming call.



8.2 Calling a number from the call list

- Press the call log key  (12) (handset) or  (19) (base) to go into the call list.
- Press the up or down key  (3)/ (12) (handset) or  (20)/ (19) (base) to look up the desired number.
- Once the number is on the display, go off hook and the number is dialed automatically.




 


8.3 Storing a number from the call list in the phonebook or under M1..M3

For the handset






- Press the call log key  (12) to go to the call list.
- Press the up or down key  (3)/ (12) to look up the desired number.
- Press 'Option' (2).
- Press the up or down key  (3)/ (12) repeatedly until 'Save number' is selected.
- Press  (2) to confirm.

- **'Name:'** is displayed. Use the alphanumeric keys to add a name. Or if the name was send by the network, you can edit it before saving. Press **'Save'** (2) to confirm.
- The telephone number is displayed. Edit the number if needed and press **'Save'** (2) to confirm.
- Press the up or down key  (3) /  (12) repeatedly to select the desired melody.
- Press **'Save'** (2).
- The handset returns to the call list.

For the base








 
 



 
- Press the call log key  (19) to go to the call list.
- Press the up or down key  (20) /  (19) to look up the desired number.
- Press  / OK (24).
- Press the up or down key  (20) /  (19) repeatedly until **'Save To PB'** is selected to store the number into the base phonebook memory.

OR




 
 




- Press up or down key  (20) /  (19) repeatedly until **'Save to M1..M3'** is selected to store the number under the direct memory keys **M1...M3**.
- Press  / OK (24) to confirm.
- **'Name'** is displayed. Use the alphanumeric keys to add a name. Or if the name was send by the network, you can edit it before saving. Press  / OK (24) to confirm.
- The telephone number is displayed. Edit the number if needed and press  / OK (24) again to store.

8.4 Deleting numbers from the call list

8.4.1 Deleting one number



- Press the call log key  (12) (handset) or  (19) (base) to go to the call list.
- Press the up or down key  (3) /  (12) (handset) or  (20) /  (19) (base) to look up the desired number.
- Press **'Option'** (2) for the handset or  / OK (24) on the base.
- Press the up or down key  (3) /  (12) (handset) or  (20) /  (19) (base) repeatedly until **'Delete call'** (handset) or **'Delete'** (base) is selected.
- Press  (2) (handset) or  / OK (24) twice (base) to confirm.
- The call is deleted and the next call appears on the display.

8.4.2 Delete all numbers

- Press the call log key  (12) (handset) or  (19) (base) to go to the call list.
- Press **'Option'** (2) for the handset or  / OK (24) key on the base.
- Press the up or down key  (3) /  (12) (handset) or  (20) /  (19) (base) repeatedly until **'Delete All'** (handset / base) is selected.
- Press  (2) twice (handset) or  / OK (24) twice (base) to confirm.
- All calls are deleted.

9 Voice mail indicator


 
 

This function only works if you have the voice mail or phone mail service and if the network sends this indication along with the caller ID (CLIP) information!

When you receive a new message in your voice mail system, the  icon will appear on the display. Once you have listened to your messages, the  icon will disappear.

 
 
10 The base phonebook and direct memory keys (M1,M2,M3)

The phonebook allows you to memorise 200 telephone numbers and names. You can also store a telephone number under the direct memory keys **M1**, **M2** and **M3**. You can enter names of up to 16 characters length and numbers of up to 24 digits length.


 

 
10.1 Adding a number and a name to the phonebook

- Press and hold the phonebook  (25) key until 'Enter name' appears.
- Enter the name using the alphanumeric keys.
- Press  (24) and enter the telephone number.
- Press  (24) to store the record in the phonebook or press the escape key  (23) to cancel.




 


 
 
 


10.2 Adding a number and name to the direct memory keys M1, M2 and M3

- Press and hold the **M1**, **M2** or **M3** key until 'Enter Name' appears.
- Enter the name using the alphanumeric keys.
- Press  (24) and enter the telephone number.
- Press  (24) to store the record under the direct memory key.







10.3 Looking up a number in the phonebook

- Press the phonebook key  (25).
- Enter the first letter of the desired name via the alphanumeric keypad.
- The first name in the list with this letter appears on the display.
- Press the up or down key  (20) /  (19) to browse for other numbers in the phonebook.
- If the desired number appears on the display, the number will be automatically dialed when going off-hook or when pressing the phonebook key  (25).

10.4 Changing a name or number in the phonebook

- Press the phonebook key  (25).
- Enter the first letter of the desired name.
- The first name in the list with this letter appears on the display.
- Press the up or down key  (20) /  (19) to browse and select the entry in the phonebook.
- Once the desired number appears on the display, press  (24).
- Press the up or down key  (20) /  (19) and select 'Edit'. Press  (24) to confirm.
- Press  (22) to delete each letter of the name and use the alphanumeric keypad to enter the correct name.
- Press  (24).
- Press  (22) to delete each number one by one and use the keypad to enter the correct number.
- Press  (24).

10.5 Deleting one or all entries from the phonebook

- Press the phonebook key  (25).
- Enter the first letter of the desired name via the alphanumeric keypad or press the up or down key  (20) /  (19) to browse and select the entry in the phonebook.
- Once the desired number appears on the display, press  (24).
- Press the up or down key  (20) /  (19) and select 'Delete'.

- Press \rightarrow /OK (24) twice to confirm.
OR
- Select **'Delete all'** to delete all the entries and press \rightarrow /OK (24) twice.

10.6 Copy a phonebook entry to another handset or base

- Press the phonebook key ☰ (25).
- Enter the first letter of the desired name via the alphanumeric keypad or press the up or down key \blacktriangle (20)/ \blacktriangledown (19) to browse and select the entry in the phonebook.
- Once the desired number appears on the display, press \rightarrow /OK (24).
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) and select **'Copy Entry'** and press the OK key \rightarrow /OK (24).
- The available handsets (all the handsets that are registered on the base) are shown including the base (= handset 0).
- Press the left or right keys \blacktriangleleft (33)/ \blacktriangleright (35) repeatedly to select the correct handset.
- Press the OK key \rightarrow /OK (24) to confirm.
- **'Cpy to HS x'** appears on the display.
- **'Receive phonebook record?'** appears on the display of the destination handset.
- On the destination handset, press ✓ (2) to confirm or ✗ (15) to cancel.

10.7 Copy all phonebook entries to another handset



By copying all entries from the base to a handset, you will erase all existing records at the destination handset.

- Press the phonebook key ☰ (25).
- As soon as a number appears on the display, press \rightarrow /OK (24)
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) and select **'Copy All'** and press the OK key \rightarrow /OK (24).
- The available handsets (all the handsets that are registered on the base) are shown.
- Press the left or right keys \blacktriangleleft (33)/ \blacktriangleright (35) and select the correct handset. Press the OK key \rightarrow /OK (24) to confirm.
- **'Cpy to HS x'** appears on the display.
- **'Replace All Phonebook Record?'** appears on the display of the destination handset.
- On the destination handset, press ✓ (2) to confirm or ✗ (15) to cancel.

10.8 Add all phonebook entries to the phonebook of another handset

- Press the phonebook key ☰ (25).
- Once the desired number appears on the display, press \rightarrow /OK (24).
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) and select **'Copy append'** and press the OK key \rightarrow /OK (24).
- The available handsets (all the handsets that are registered on the base) are shown.
- Press the left or right keys \blacktriangleleft (33)/ \blacktriangleright (35) and select the correct handset. Press the OK key \rightarrow /OK (24) to confirm.
- **'Cpy to HS x'** appears on the display.
- **'Receive Phonebook Record?'** appears on the display of the destination handset.
- On the destination handset, press ✓ (2) to confirm or ✗ (15) to cancel.




 






 
11 Base operation

This part only describe the base corded phone functions (how to set up a call, receive a call and do different settings). For the handset operation see "6 Handset operation".

11.1 Setting the language





The telephone has 15 display languages.

To set the language, do the following:






- Press the menu key /OK (24).
- Press the up or down key  (20)/ (19) repeatedly until 'Display' is selected
- Press /OK (24) to confirm.
- Press the up or down key  (20)/ (19) repeatedly until 'Language' is selected
- Press /OK (24) to confirm.
- The language set appears on the display.
- Press the up or down key  (20)/ (19) repeatedly to select the language you would like to use.
- Press /OK (24) to confirm your selection or press  (23) to leave the menu without saving.

11.2 Making Calls


11.2.1 External Call

- Lift the handset or press the handsfree key  (29).
- The call symbol  or  appear on the base display.
- You will hear the dial tone. Dial the telephone number you wish to call.
- The number appears on the display and is dialed.
- After finishing your call, hang up. Press the handsfree key  (29) when you are in handsfree mode.




11.2.2 Number preparation


- Dial the telephone number you wish to call.
- You can correct the number by pressing the /C (22) key.
- Lift the handset or press the handsfree key  (29).
- The call symbol  or  appear on the base display.
- The telephone number is dialed automatically.
- After finishing your call, hang up. Press the handsfree key  (29) when you are in handsfree mode.

11.2.3 Redialing the last number dialed

- Press the redial key  (20).
- Lift the handset or press the handsfree key  (29). The number you last called is dialed automatically.

11.2.4 Redial one of the last 5 numbers dialed

 


- Press the redial key  (20).
- The number you last called appears on the display.
- Press the redial key  (20) a few times until the desired number appears on the display.
- Lift the handset or press the handsfree key  (29).
- The number shown on the display is dialed automatically.

 




- After finishing your call, hang up. Press the handsfree key  (29) when you are in handsfree mode.

11.2.5 Redial list options

When scrolling through the redial list.

You have the following options:




When the desired number is shown on the display press /OK (24) and select with the up and down keys  (20)/ (19) the following options:

- **'Delete'**: to delete an entry in the redial list. Press /OK (24) twice to confirm.
- **'Save to PB'** or **'Save to M1..M3'**: to store the number into the phonebook memory or under M1, M2 or M3.
- Press /OK (24) twice to confirm.
- Enter a name and press /OK (24).
- Edit the number and press the /OK (24) again.
- **'Delete All'**: to delete all entries in the redial list. Press /OK (24) twice to confirm.

11.2.6 Calling a programmed number from the phonebook




 

The telephone has a phonebook in which you can store telephone number with name. (See also "10 The base phonebook and direct memory keys (M1,M2,M3)".)

To call a number from the phonebook:

- Press the phonebook key  (25).
- Enter the first letter of the desired name via the alphanumeric keypad.
- The first name in the list with this letter appears on the display.
- Press the up or down key  (20)/ (19) to browse for other numbers in the phonebook.
- If the desired number appears on the display, the number will be automatically dialed when going off-hook.



11.3 Receiving a call

During an external incoming call, the base will start to ring.

- The call symbol  blinks on the display.
- The telephone number of the caller appears on the display if you have Caller ID service (CLIP). Consult your telephone company. The name of the caller also appears on the display if:
 - the number is programmed into the phonebook with name
 - the network sends the name together with the telephone number
- Lift the handset or press the handsfree key  (29).
- During the conversation the  or  symbol appear on the display and the call timer starts to run.
- After finishing your call, hang up. Press the handsfree key  (29) when you are in handsfree mode.

11.4 Activate / deactivate handsfree function

This function allows you to communicate without having to pick up the handset.






- When you are talking, press the handsfree key  (29) to activate the handsfree function.
- Press the  (29) button again to deactivate the handsfree function.



When you are calling in handsfree mode and you want to change the volume, press the volume keys  (28)/ (32) repeatedly.

11.5 Setting the handset speaker volume

Use the volume keys \leftarrow (28) / \rightarrow (32) during conversation to set the volume of the speaker. You can select from 5 levels. The telephone is set to level '3' by default:

	'Volume 1'
	'Volume 2'
	'Volume 3'
	'Volume 4'
	'Volume 5'



The handsfree volume can be set the same way as above!

11.6 Call duration indicator on the display

During an external call, the call duration is shown on the display:

E.g. "10:40" for 10 minute and 40 seconds.

The call duration remains visible on the display for 4 seconds after each call.

11.7 Turning off the microphone (mute)

To turn off the microphone during a call press the mute key \otimes /C (22). Now you can speak freely without the caller being able to hear you. To activate the microphone again, press the mute key \otimes /C (22) again. When the microphone is turned off 'Mute' is displayed and the symbol \otimes appears on the display.

11.8 Pause key

If you dial a telephone number and you would like to add a pause to this number, press the Pause key P (20) at the desired place in the number until 'P' appears in the display. When you dial or redial this number, the pause (3 seconds) is automatically included.

11.9 Locating a misplaced handset (paging)

If you cannot find the handset, briefly press the Paging key $\bullet\bullet$ (27) on the base unit.

All handsets subscribed on the base unit will ring so you can locate the misplaced handset. To stop the signal, briefly press any key on any ringing handset.

11.10 Using the alphanumeric keypad


Use the alphanumeric keypad to type text. To select a letter, press the corresponding alphanumeric key. E.g. if you press the alphanumeric key '5', the first character 'J' appears on the display. Press it repeatedly to select other characters from this key.

Press the '2' key once to select the letter 'A'. If you would like to select both 'A' and 'B' after each other, first press the '2' key once to select 'A', wait 2 seconds until the cursor moves to the next position and then press the '2' key repeatedly until 'B' is shown. You can delete characters mistakenly typed by using the Delete key \otimes /C (22). The character in front of the cursor will be deleted.

You can move the cursor by pressing the left and right keys \leftarrow (33) / \rightarrow (35). You can switch between upper and lower case by pressing '*' key. To change the characterset see "11.21 Change the base character set".


 
 
 
 
 
 

 
 
 
11.11 Setting the ring volume level of the base

You can change the ring volume of an incoming call (internal and external) between 6 levels (levels '1' to '5' and 'Off').

 

If you select level 'Off', the symbol  appears on the display. The handset will not ring when a call is received.

Level '5' is the highest level. The telephone is set to level '3' by default.

11.11.1 Setting the ring volume for internal and external calls (0-5)

- Press the menu key /OK (24).
- Press the up or down key  (20)/ (19) repeatedly until 'Ringer Tone' is selected
- Press /OK (24) to confirm.
- Press the up or down key  (20)/ (19) repeatedly until 'Volume' is selected
- Press /OK (24) to confirm.
- The current volume is shown and hearable.
- Press the up or down key  (20)/ (19) repeatedly to select the desired volume.
- Press /OK (24) to confirm your selection or press  (23) to leave the menu without saving.


 

 
 
 

 

 
 


You can also set the ring volume using the volume keys  (28)/ (32) during standby.

11.12 Setting the ringer melody of the base


 

 
 

 
 
You can change the ringer melody for an incoming call (internal or external). The unit has 9 ringer melodies to choose from ('1'-'9').

11.12.1 Setting a ringer melody for internal or external calls (1-9)

- Press the menu key /OK (24).
- Press the up or down key  (20)/ (19) repeatedly until 'Ringer Tone' is selected
- Press /OK (24) to confirm.
- Press the up or down key  (20)/ (19) repeatedly until 'EXT melody' or 'INT Melody' is selected.
- Press /OK (24) to confirm.
- The current melody is shown and hearable.
- Press the up or down key  (20)/ (19) repeatedly to select the desired melody.
- Press /OK (24) to confirm your selection or press  (23) to leave the menu without saving.

11.13 Turning key click on/off

You can set the base to make a beep whenever you press a key.

- Press the menu key /OK (24).
- Press the up or down key  (20)/ (19) repeatedly until 'Key Tone' is selected.
- Press /OK (24) to confirm.
- Press the up or down key  (20)/ (19) repeatedly to select:
 - 'On': turn on key click
 - 'Off': turn off key click
- Press /OK (24) to confirm your selection or press  (23) to leave the menu without saving.

11.14 Display contrast

To change the display contrast:

- Press the menu key \rightarrow /OK (24).
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly until 'Display' is selected
- Press \rightarrow /OK (24) to confirm.
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly until 'Contrast' is selected
- Press \rightarrow /OK (24) to confirm.
- The current contrast appears on the display.
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly to select the contrast (1-3).
- Press the \rightarrow /OK (24) to confirm your selection or press \blacksquare (23) to leave the menu without saving.

11.15 Default reset (base reset)

You can restore all base settings back to default and erase all phonebook, call log, VIP list and redial entries.

To restore the default settings

- Press the menu key \rightarrow /OK (24).
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly until 'Reset' is selected
- Press \rightarrow /OK (24) to confirm.
- Enter the PIN code (default '0000') and press \rightarrow /OK (24) to confirm.
- 'Reset...' appears on the display.

The default settings are

Key Beep:	On
External melody:	Melody 8
Internal melody:	Melody 9
Ringer volume:	Volume 3
Earpiece vVolume:	Volume 3
Handsfree:	Volume 3
LCD contrast:	1
Time format:	24 hours
Phonebook:	Empty
Call log:	Empty
Redial list:	Empty

11.16 Setting the clock



The handset date and time will be set by the base accordingly.

11.16.1 Date and time

- Press the menu key \rightarrow /OK (24).
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly until 'Time' is selected.
- Press \rightarrow /OK (24) to confirm.
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly until 'Date & Time' is selected.
- Press \rightarrow /OK (24) to confirm.
- The current data appears on the display (DD/MM-YYYY: DD=day, MM= month and yyyy= year).

- Enter the date, month and year and press →/OK (24) to set the time.
- Enter the time and press →/OK (24) to confirm.



If you have Caller id on your telephone line and the operator sends date and time, your clock will be set automatically on an incoming call.

11.16.2 Time format

- Press the menu key →/OK (24).
- Press the up or down key ▲ (20)/▼ (19) repeatedly until 'Time' is selected
- Press →/OK (24) to confirm.
- Press the up or down key ▲ (20)/▼ (19) repeatedly until 'Format' is selected
- Press →/OK (24) to confirm.
- Press the up or down key ▲ (20)/▼ (19) repeatedly to select the desired format (12Hrs/24Hrs).
- Press →/OK (24) to confirm.

11.17 The R key (flash)

With the Flash key R (19) you can use certain services on your external line such as "Call Waiting" (if your telephone company offers this feature); or to transfer calls if you use a telephone exchange (PABX). The Flash key R is a brief interruption of the line. You can set the flash time to 100ms or 300ms:

- Press the menu key →/OK (24).
- Press the up or down key ▲ (20)/▼ (19) repeatedly until 'Settings' is selected
- Press →/OK (24) to confirm.
- Press the up or down key ▲ (20)/▼ (19) repeatedly until 'Recall' is selected
- Press →/OK (24) to confirm. Press the up or down key ▲ (20)/▼ (19) repeatedly to select the desired flash time:
 - 'Long' = 300ms
 - 'Short' = 100ms
- Press →/OK (24) to confirm your selection or press ■ (23) to leave the menu without saving.

11.18 Changing the PIN code (system PIN code)

Certain functions are only available if you know the PIN code of the base.

The PIN code has 4 digits. The default PIN code setting is '0000'. If you would like to change the PIN code and set your own secret code, do the following:

- Press the menu key →/OK (24).
- Press the up or down key ▲ (20)/▼ (19) repeatedly until 'Settings' is selected.
- Press →/OK (24) to confirm.
- Press the up or down key ▲ (20)/▼ (19) repeatedly until 'System PIN' is selected.
- Press →/OK (24) and enter the old PIN code.
- Press →/OK (24). If the wrong PIN code is entered 3 errors beeps will be heard. If the correct PIN code is entered the phone will ask you to enter the new PIN. Enter a new system PIN code and press →/OK (24).
- Enter the new PIN code again to confirm and press →/OK (24).

11.19 Setting the dialing mode

There are two types of dialing modes that can be used on a telephone line:

- DTMF/Tone dialing (the most common)
- Pulse dialing (for older installations)

To change the dialing mode:

- Press the menu key \rightarrow /OK (24).
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly until **'Settings'** is selected.
- Press \rightarrow /OK (24) to confirm.
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly until **'Dial mode'** is selected.
- Press \rightarrow /OK (24) and select the dial mode with the up and down keys \blacktriangle (20)/ \blacktriangledown (19) and press \rightarrow /OK (24) to confirm.

11.20 Removing a handset

It is possible to cancel subscription of a handset to a base. You should do this if a handset is damaged and has to be replaced by a new one.

- Press the menu key \rightarrow /OK (24).
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly until **'Remove HS'** is selected.
- Press \rightarrow /OK (24) to confirm.
- Enter the system PIN (default '0000') and press \rightarrow /OK (24)
- Enter the handset number you want to remove and press \rightarrow /OK (24) to confirm.

11.21 Change the base character set

To change the input character set on the base from English (ABC) to Latin (AÀÁ....), Greek (ΑΒΓ) or Russian (АБВГ):

- Press the menu key \rightarrow /OK (24).
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly until **'Settings'** is selected.
- Press \rightarrow /OK (24) to confirm.
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly until **'Change Case'** is selected.
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly to change the character set.
- Press \rightarrow /OK (24) to confirm.

12 Answering machine

The Cocoon 1150 combo has a built-in digital answering machine with a recording capacity of at least 9 min. The answering machine can be operated remotely and features the possibility of recording two outgoing messages (OGM 1 and OGM 2) (maximum of 2 min).

There are 2 possibilities:

- With OGM 1, the caller has the possibility to leave a message
- With OGM 2, only the outgoing message is given without the caller having the opportunity to leave a message

The max. recording time for each incoming message = 2 min.

An internal voice will state various information, such as day and time of the call. The language of the internal voice is stated on the packaging!

12.1 LCD display

The LCD display (17) on the base indicates how many messages you have received. When there are new messages, the display on the base will indicate the amount of new messages.

If there are old and new messages, only the new messages will be shown blinking. If there are only old messages the amount will not blink. If the answering machine is switched off, the display will show “**Answer OFF**”.

12.2 Base key functions

Key	Stand-by mode		During message play-back
	Press key briefly	press key for 2 seconds	
■ (23)	Answering ON/OFF	Select OGM	Stop
⊗/C (22)	None	Delete all messages	Delete message or delete OGM (press key for 2 seconds)
◀◀ (33)	Play OGM	Record OGM	Go to previous message
▶▶ (34)	Playback messages	None	Pauste
▶▶ (35)	None	Record memo	Skip message
— (28)/ — (32)	Set volume	None	Set volume

12.3 Outgoing messages

Two outgoing messages of 2 minutes can be recorded (OGM1 and OGM2).

- Outgoing message 1 for the answering function and possibility for callers to leave a message.
- Outgoing message 2 for the answering function without allowing callers to leave a messages on the machine.

12.3.1 Recording outgoing messages (OGM 1 or OGM 2)

- Press the ■ (23) key to activate the answering machine.
- Press and hold the ■ (23) key for 2 seconds to select the OGM 1 or OGM2.
- The answering machine will state the selected mode.
- Press the (33) key for two seconds.
- Record the outgoing message after the beep by speaking into the microphone (36).
- Press the stop key ■ (23) to stop recording.

12.3.2 Playback the outgoing message

To check the outgoing message now set:

- Press the (33) key.



To stop playing the welcome note briefly press the stop key ■ (23).

12.3.3 Select outgoing message

- Press the menu key ↗/OK (24).
- Press the up or down key ▲ (20)/▼ (19) repeatedly until ‘**Ans Machine**’ is selected.
- Press ↗/OK (24) to confirm.
- Press the up or down key ▲ (20)/▼ (19) repeatedly until ‘**Answer Mode**’ is selected.
- Press ↗/OK (24) to confirm.

- Press the up or down key ▲ (20)/▼ (19) to select 'Answer Only' or 'Answer & Record'.
- Press →/OK (24) to confirm..



If the memory is full, only outgoing message 2 will be played (only answering without recording messages).

12.3.4 Erasing the outgoing message

Erase the outgoing message as follows:

- Select the desired outgoing message as mentioned above.
- Press the ☎ (33) key to play the outgoing message.
- Keep the ⊗/C (22) key pressed when the OGM is played back.

12.4 Turning answering machine on/off

If the answering machine is on, the LCD display (17) will light up and the machine will automatically pick up the line after a number of rings (see "12.5 Setting number of rings").

- Press the ■ (23) key to switch on the answering machine. 'XX Message' will be shown.
- Press the ■ (23) key to switch off the answering machine. 'Answer Off' will be shown.



Even if the answering machine is off, the machine will automatically pick up after 10 rings in order to enable remote activation (see "12.13 Remote operation").

12.5 Setting number of rings

The number of rings after which the answering machine will answer calls can be set from 2 – 9 and TS (Toll saver). The standard setting is 3 rings. In Toll saver mode, the machine will answer after 5 rings if there are no new messages, and after 2 rings if there are new messages. If there are no new messages and you call your machine to check your messages remotely (see "12.13 Remote operation"), you can hang up after the 2nd ring. You do not need to pay connection fees and you know that you do not have any new messages.

- Press the OK key →/OK (24) twice.
- Press the up or down key ▲ (20)/▼ (19) repeatedly until 'Answer Delay' is selected.
- Press →/OK (24) to confirm.
- Select the amount of rings (2-9 or Toll saver) with the up or down key ▲ (20)/▼ (19).
- Press →/OK (24) to confirm your selection or press ■ (23) to leave the menu without saving.

12.6 Changing the language of the answering machine

- Press the OK key →/OK (24) twice.
- Press the up or down key ▲ (20)/▼ (19) repeatedly until 'Language' is selected.
- Press →/OK (24) to confirm.
- Press the up or down key ▲ (20)/▼ (19) repeatedly to select the desired language.
- Press →/OK (24) to confirm your selection or press ■ (23) to leave the menu without saving.

12.7 Programming the VIP code

The VIP code is a 3-digit code used to operate the machine remotely (see "12.13 Remote operation"). The VIP code is set to '321' by default.

12.7.1 Changing the VIP code (remote PIN)

- Press the OK key →/OK (24) twice.
- Press the up or down key ▲ (20)/▼ (19) repeatedly until 'Remote PIN' is selected.
- Press →/OK (24) and enter the old VIP code.
- Press →/OK (24), the phone will ask you to enter the new VIP code. Enter a new VIP code and press →/OK (24).
- Enter the new VIP code again to confirm and press →/OK (24).



If you do not press any keys for 20 seconds, the previous VIP code is saved and the machine automatically exits the VIP setting mode.

12.8 Operation

If a call is received and the answering machine is turned on, the answering machine will automatically pick up the line after the set number of rings. If

- Outgoing message 1 has been selected, it will be played. After the outgoing message, a beep will be heard and the caller can leave a message (of a max. 2 minutes).
- Outgoing message 2 has been selected, it will be played. After the beep, the line will automatically be disconnected. The caller does not have the possibility to leave a message.



If, during pick-up, nothing is said for 4 seconds, the line will be automatically disconnected.

12.9 Recording a memo

With the Cocoon 1150 combo, you can record memos. These memos are considered an incoming message that can be picked up later by the user. The max. recording time for a memo is 2 minutes.

- Press the 1 (35) key for 2 seconds. After the beep, say your memo by speaking into the microphone (36).
- Press the stop key ■ (23) to stop recording.

12.10 Playback of incoming messages and memos

- Press the ► (34) key to play the messages and memos.
- The messages are played one at a time. If there are new messages, only the new messages (those that have not been heard) are played.
- During playback, you can:
 - go to the beginning of the current message by pressing the ◀◀ (33) key once.
 - go to the previous message by pressing the ◀◀ (33) key twice.
 - stop playback by pressing the stop key ■ (23).
 - interrupt playback by pressing the Pause key |► (34). Press the play key ► (34) again to restart playback.
 - go to the next message by pressing the ▶▶ (35) key.

12.11 Erasing messages

12.11.1 Erasing messages one at a time during playback

Start message playback as explained above.

- When the message to be erased starts playing, press the delete ⊗/C (22) key for 2 secs
- The display will show 'Msg Deleted'.

12.11.2 Erase all messages

One can also erase all heard messages at one time. This erases only the messages that have already been heard. New messages are not erased.

- Press the delete \otimes /C (22) key for 2 secs.
- The display will show 'Delete All?'
- Press the delete \otimes /C (22) key again to confirm.

OR

- Press the \rightarrow /OK (24) twice.
- Press the up or down key \blacktriangle (20)/ \blacktriangledown (19) repeatedly until 'Del. All Msgs' is selected and press \rightarrow /OK (24).
- Press the \rightarrow /OK (24) key again to confirm or press \blacksquare (23) to cancel.

12.12 Memory full

If the memory is full, 'Memory Full' will flash on the display. If the answering machine is turned on and a call comes in, the machine will automatically play OGM 2 (answering machine function without recorded caller message).

- Erase all the messages after listening to them.
- The memory is free again.

12.13 Remote operation

The answering machine can only be operated remotely using a touch-tone phone (DTMF tone selection system).

- Call your machine.
- The answering machine picks up the line, you hear the outgoing message and a beep.
- After the beep, press '*' (2x'*').
- Slow dial the VIP code (default '321') after the announcement.
- You will hear two short beeps for confirmation and the internal voice will announce all possible operations.
- Enter the next codes to use the desired function:

a) Listening to messages

- Press '2' (listen to messages). The answer machine will play the messages.

During playback, you have the following options:

- Press '2' to stop playback.
- Press '2' again to restart playback.
- Press '3' to go to the next message.
- Press '1 1' to go to the previous message.
- Press '1' to repeat the current message.
- Press '6' to stop playback.
- Press '7' to erase the current message.

b) Erasing all old messages

After listening to all messages, press '0' to erase all messages.

c) Playing outgoing message

- Press '4' to play the current outgoing message.

d) Recording outgoing message

- Press '9' to select OGM 1 or OGM 2.
- Press '5' to start recording
- A beep will indicate that you can start recording.
- Say your message.
- Press '6' to stop recording.



Recording will be automatically interrupted after 2 minutes.

e) Recording a new memo

- Press '#'.
- After the announcement the recording will start.
- Say your message.
- Press '6' to stop recording.

f) Turning answering machine on/off

- Press the '9' key to switch on the answering machine.
- Press the '8' key to turn off the answering machine.

g) Ending remote operation

If you want to end remote operation, press '6'.


12.14 Turning answering machine on remotely

If the answering machine is switched off, you can turn it on remotely.


- Call your machine.
- The machine will pick up automatically after 10 rings and play outgoing message 2.
- After the beep, press '**' (2x'*').
- Slow dial the VIP code (default '321') slowly after the announcement.
- You will hear two short beeps for confirmation and the internal voice will announce all possible operations.
- Press '9' to turn it on.

13 Wall mounting

- Pull out and rotate the wall mounting hook (37).
- Put it back in position.
- Measure and mark the wall mounting locations (38).
- Drill holes, fit wall plugs and screw in screws.
- Mount the telephone on the screws.

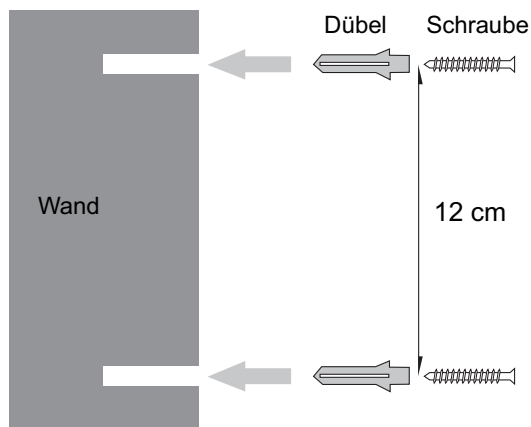

14 Trouble shooting

Symptom	Possible cause	Solution
No display; the display stays dark	Batteries wrongly inserted	Check the position of the batteries
	Batteries uncharged	Recharge the batteries
	Handset turned off	Turn ON the handset
No tone	Telephone cord badly connected or defect	Check the telephone cord connection
	The line is occupied by another handset	Wait until the other handset hangs up
The icon  flashes	Handset out of range	Bring the handset closer to the base
	The base has no power supply	Check the mains connection to the base
	The handset is not registered to the base	Register the handset to the base
Base or handset do not ring	The ringing volume is zero or low	Adjust the ringing volume

Tone is good, but can not make any connection	The dialing mode is wrong	Adjust the dialing mode (pulse/tone)
Not possible to transfer a call on PABX	The Flash Time is too short	Change the Flash Time
Handset does not react to pressing the keys	Manipulation error	Remove the batteries for at least 1 minute and put them back in place

15 Technical characteristics

Standard:	DECT (Digital Enhanced Cordless Telecommunications) GAP (Generic Access Profile)
Frequency range:	1880 MHz to 1900 MHz
Number of channels:	120 duplex channels
Modulation:	GFSK
Speech coding:	32 kbit/s
Emission power:	10 mW (average power per channel)
Range:	300 m in open space / 50 m maximum in-house
Base power supply:	In: 230V AC / 50Hz - Out: 6V DC / 400mA
Charger power supply:	In: 230V AC / 50Hz - Out: 7,5V DC 100mA
Handset Batteries:	2 rechargeable batteries AAA, NiMh 600mAh
Handset standby time:	100 hours in standby
Handset talk time:	10 hours
Charging time:	16 hours
Dialing mode	Tone / Pulse
Normal conditions of use:	+5 °C to +45 °C
Flash time:	100ms or 300ms
Measurements:	Base: 171mm x 174mm x 62mm Handset: 154mm x 44mm x 22 mm Charger: 94mm x 73mm x 65mm
Weight:	Base with power supply included: 790g Handset with 2 batteries: 100g Charger with power supply included: 171g

16 Warranty

16.1 Warranty period

The devices have a 36-month warranty period. The warranty period starts on the day the new unit is purchased. There is no warranty on standard or rechargeable batteries (AA/AAA type). Consumables or defects causing a negligible effect on operation or value of the equipment are not covered. The warranty has to be proven by presentation of the original or copy of the purchase receipt, on which the date of purchase and the unit-model are indicated.

16.2 Warranty handling

A faulty unit needs to be returned to an authorized service centre including a valid purchase note and a filled in service card.

If the unit develops a fault during the warranty period, the service centre will repair any defects caused by material or manufacturing faults free of charge, by either repairing or exchanging the faulty units or parts of the faulty units. In case of replacement, colour and model can be different from the original purchased unit.

The initial purchase date shall determine the start of the warranty period. The warranty period is not extended if the unit is exchanged or repaired by the service centre.

16.3 Warranty exclusions

Damage or defects caused by incorrect treatment or operation and damage resulting from use of non-original parts or accessories are not covered by the warranty.

The warranty does not cover damage caused by outside factors, such as lightning, water and fire, nor any damage caused during transportation. No warranty can be claimed if the serial number on the units has been changed, removed or rendered illegible. Any warranty claims will be invalid if the unit has been repaired, altered or modified by the buyer.

This appliance may only be used with rechargeable batteries. If you want to replace the originally included batteries, please check whether the batteries you use are suitable and rechargeable. Alkaline batteries may under NO circumstances be used in the handsets. If you use Alkaline batteries and place the handset on the basis, the batteries will heat up and may explode. Any damage which may be caused cannot be recovered from the manufacturer and the damage thus caused to the appliance is not covered by the warranty conditions. Any repairs will be charged to you.

17 Service address and support

Please see extra paper (Service address and support numbers) or www.ucom.be.

18 Declaration of conformity and manufacturer

Topcom Europe Nv.
Grauwmeer 17
3001 Heverlee
Belgium

DECLARATION OF CONFORMITY

We manufacturer, Topcom Europe Nv, Grauwmeer 17 , 3001 Heverlee , Belgium, declare that our product :

Type: Wireless Telephone Device (DECT)

Model: Cocoon 1150 Combo

Class of equipment: Class 1

is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC and carries the CE mark accordingly.

Supplementary information:

The product complies with the requirements of:

- EN 60950-1 : 2006
- EN 301489-01 V1.6.1 : 2002
- EN 301489-06 V1.2.1 : 2002
- EN 301406 V1.5.1 : 2003

Date: 28/7/2008

Place: Heverlee , Belgium

Name: Verheyden Geert

Function: Technical Director

Signature:



European contact: Topcom Europe Nv, R&D department, Research Park, Grauwmeer 17, 3001 Heverlee, Belgium. Tel : +32 16 398920 , Fax : +32 16 398939

SERVICE RETURN CARD

Please fill in this card in **CAPITAL LETTERS** and attach to the product when you return in for service.

Customer Details

Name:

Surname:

Street:

Nr.: Box:

Location: Post code:

Country:

Tel.:

E-mail:

Product Details

Model name:

Serial Nr:

Purchase date: -- (DD/MM/YYYY)

Fault description: _____

(Original proof of Purchase has to be attached to this return card to be valid for warranty)

Product Details

Model name:

Serial Nr:

Purchase date: -- (DD/MM/YYYY)

Fault description: _____

(Please keep this part for future reference)

Cocoon 1150 Combo

visit our website
www.ucom.be