 


UCOM

COCOON 510

 
CORDLESS TELEPHONE



USER GUIDE

V.1.2





BEFORE INITIAL USE

Thank you for purchasing this new digital cordless telephone

Intended Purpose:

 
This product is intended to be connected indoor to an analogue telephone line.

You have acquired a Cocoon 510, which is a product made in accordance with the Digital Enhanced Cordless Telecommunications (DECT). DECT technology is characterized by high-security protection against interceptions as well as high-quality digital transmission.

This telephone was designed for a wide range of applications. For example, this telephone can be used within a network of base units and handsets, constituting a telephone system which:

- Operates up to 2 handsets at one base unit.
- Allows an intercom between 2 handsets.
- Allows the operation of a handset at up to 4 base units.



Caller ID and SMS Services, where available, are network provider services. After subscribing to Caller ID, this phone will display the caller's phone number.




!! Important !!


To use Caller ID (display caller), this service has to be activated on your phone line. Normally you need a separate subscription from your telephone company to activate this function. If you don't have the Caller ID function on your phone line, the incoming telephone numbers will NOT be shown on the display of your telephone.

   
The features described in this manual are published
with reservation to modifications.






1.	SAFETY ADVICE	5
2.	CLEANING	6
3.	DISPOSAL CAUTIONS	6
4.	INITIAL USE	7
4.1	HANDSET/BASE COCOON 510	7
4.2	DISPLAY- ICONS	8
4.3	HANDSET INDICATOR (LED)	9
5.	ACCESSORIES	9
6.	SETTING UP	9
6.1	CONNECTIONS	9
6.2	RECHARGEABLE BATTERIES	10
7.	USING THE TELEPHONE	10
7.1.	CHOOSING MENU LANGUAGE	10
7.2.	HANDSET ON/OFF	11
7.3.	RECEIVING A CALL	11
7.4.	MAKING AN EXTERNAL CALL	11
7.5.	MAKING AN INTERNAL CALL	11
7.6.	HANDSFREE MODE	11
7.7.	INTERNAL CALL TRANSFER	11
7.8.	DISPLAY OF CALL DURATION	12
7.9.	MICROPHONE MUTE	12
7.10.	PAUSE KEY	12
7.11.	CALLER IDENTIFICATION	12
7.12.	REDIAL MEMORY	13
7.13.	CALLING FROM THE PHONEBOOK	13
7.14.	USING THE ALPHANUMERICAL KEYPAD	14
7.15.	USING THE MENU	14
8.	PERSONALISATION	15
8.1.	SPEAKER VOLUME DURING CALL	15
8.2.	ADJUSTING THE RING VOLUME	15
8.3.	CHOOSING THE RING MELODY	15
8.4.	ACTIVATION / DEACTIVATION OF BEEPS	16
8.5.	HANDSET NAME	17
8.6.	CHANGING THE PIN CODE	17
8.7.	SETTING THE DIALING MODE	17
8.8.	FLASH TIME DURATION	18
8.9.	AUTOMATIC ANSWER	18
8.10.	RESET	18
8.11.	KEYPAD LOCK	18
9.	ADVANCED FUNCTIONS	19
9.1.	PHONEBOOK	19
9.2.	SEARCHING A HANDSET FROM THE BASE	20
10.	MANAGING MULTIPLE HANDSETS	20
10.1.	SETTING UP AN ADDITIONAL HANDSET	20
10.2.	REMOVING A HANDSET	21

 


 

Cocoon 510

10.3.	SETTING UP A HANDSET ON ANOTHER BASE	22
10.4.	SELECTING A BASE	22
11.	TROUBLE SHOOTING	23
12.	WARRANTY	24
12.1.	WARRANTY PERIOD	24
12.2.	WARRANTY HANDLING	24
12.3.	WARRANTY EXCLUSIONS	24
13.	TECHNICAL CHARACTERISTICS	25
14.	SERVICE ADDRESS AND SUPPORT	25
15.	DECLARATION OF CONFORMITY AND MANUFACTURER	25

 

 

1. SAFETY ADVICE

 
The following safety advice must be always followed before using electrical equipment. Please read carefully through the following information concerning safety and proper use. Make yourself familiar with all the functions of the equipment. Be careful to keep these advice notes and if necessary pass them on to a third party.

Electrical safety and protection:

- Do not operate the equipment if the mains plug, cable or the equipment itself is damaged.
- If the equipment is dropped, then it must be checked by an electrician before further use.
- Dangerous voltages are present inside the equipment. Never open the housing or insert objects through the ventilation holes.
- Do not allow liquids to get into the equipment. In case of emergency, pull out the plug from the socket.
- Similarly, if a fault develops during use or before you start to clean the equipment, pull the plug out if the socket.
- Do not touch the charger and plug contacts with sharp or metal objects.
- Do not carry out any modifications or repairs to the equipment yourself. Have repairs done to the equipment or the mains cable only by a specialist service centre. Unsatisfactory repairs can lead to considerable danger for the user.
- Children frequently underestimate the dangers associated with electrical equipment. Therefore you must never leave children unsupervised in the vicinity of electrical equipment.
- The equipment is not to be used in a damp room (e.g. bathrooms) or rooms where there is a lot of dust.
- Equipment connected to the mains during a thunderstorm can be damaged by lightning. Therefore you should pull the plug out of the mains socket during a storm and disconnect the aerial.
- To completely disconnect the equipment from the electricity supply, the plug must be removed from the socket. When doing this always pull on the plug itself and never on the cable.
- Protect the mains cable from hot surfaces or other sources of damage and do not allow it to become constrained.
- Check the mains cable regularly for any damage.
- Unwind the mains cable completely before use.
- Make sure that the mains cable does not represent a trip hazard.
- The operation of some medical devices may be affected.
- The handset may cause an unpleasant buzzing sound in hearing aids.

Fire safety:

- The heat accumulated inside the equipment can lead to the defect and/or to the fire of the equipment.
- Do not expose this equipment therefore to extreme temperature like:
 - direct sun exposure and heater warmth
 - ventilation holes may not be covered



Danger of explosion:

- Never throw batteries in fire.

Poisoning danger:

 
- Keep batteries away from small children.

Note:

- Only use the charger plug supplied. Do not use other chargers, as this may damage the batteries cells.
- The wall outlet for the power supply must be close and accessible
- As this telephone cannot be used in case of a power cut, you should use a mains-independent telephone for emergency calls, e.g. a mobile phone.
- Only use rechargeable batteries of the same type. Place the batteries with correct polarity inside the battery compartment (polarity is marked inside the handset). Never use normal un rechargeable batteries!


2. CLEANING

Clean the telephone with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.




3. DISPOSAL CAUTIONS

 - Dispose of the batteries and maintain the telephone in an environment-friendly manner.
- This telephone uses rechargeable batteries. You have to dispose of the batteries in an environment friendly manner according to your country regulations




4. INITIAL USE

 4.1 HANDSET/BASE COCOON 510

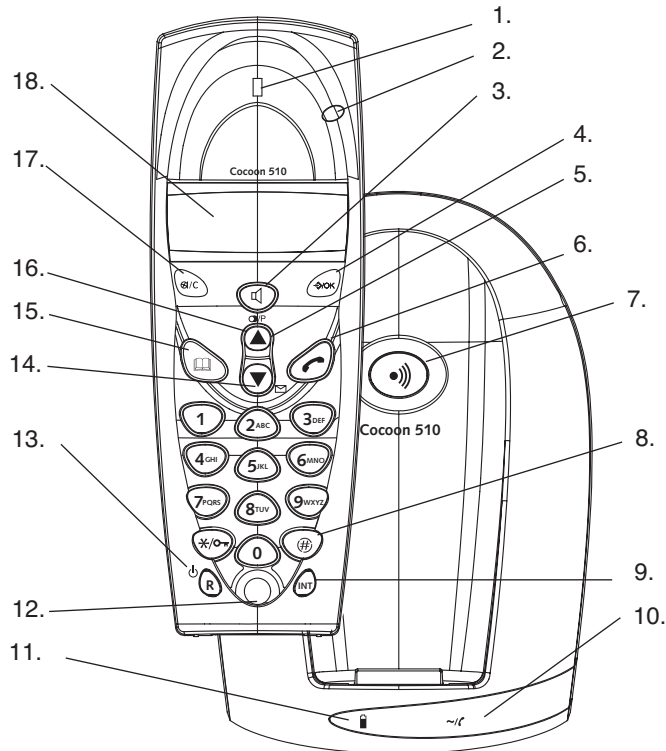

- | | |
|---------------------------------------|------------------------|
| 1. Earpiece | 13. Flash key R |
| 2. Handset indicator LED | Power ON/OFF |
| 3. Handfree | 14. Down Key |
| 4. Menu/OK /OK | Call log Key |
| 5. Redial/pause key /P | 15. Phonebook |
| 6. Line-key | 16. Up Key |
| 7. Paging Key | 17. Mute/Delete key |
| 8. Conference call | 18. Display |
| 9. Internal call INT | |
| 10. Power indicator Incoming call LED | |
| 11. Charge indicator | |
| 12. Microphone | |

 4.2 DISPLAY- ICONS

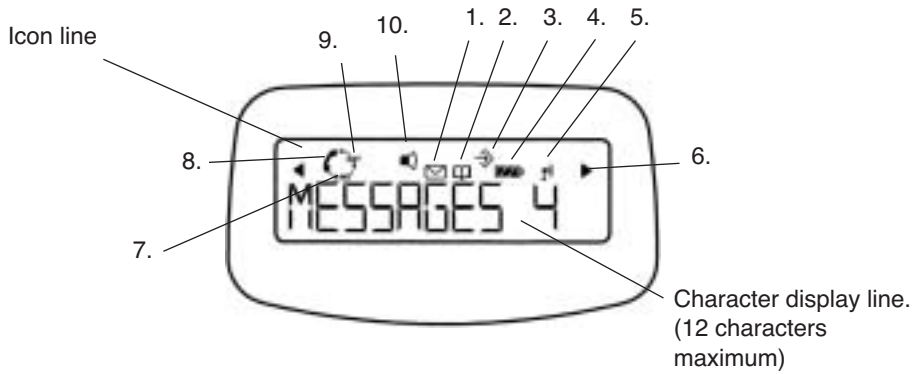

Each operation has an associated icon

Icon:	Meaning:
1.	New numbers in call list
2.	You are opening your address book.
3.	You are in the menu.
4.	rechargeable battery level indicator 1 segment: weak, 2 segments: medium, 3 segments full. The segments scroll during battery recharging
5.	The antenna indicates the quality of reception. The antenna flashes when the handset is not registered on the base.
6.	or ► Indicates that the displayed number is longer than the screen (12 digits)
7. INT	You are in internal communication
8.	You are online
9. EXT	You are in external communication
10.	Hands free mode activated

4.2.1 STAND-BY-DISPLAY

 
In stanby mode, the display shows the handset name and the handset number:

C510 HS1

4.3 HANDSET INDICATOR (LED)

The handset LED has following function:

- ON when the external line is busy
- OFF when all handset are in stanby mode
- Flashes on all handset when there is an incoming call




5. ACCESSORIES

Cordless telephone, 1 handset, 1 power supply, telephone line cord, 2 batteries

6. SETTING UP

6.1 CONNECTIONS

 ENGLISH

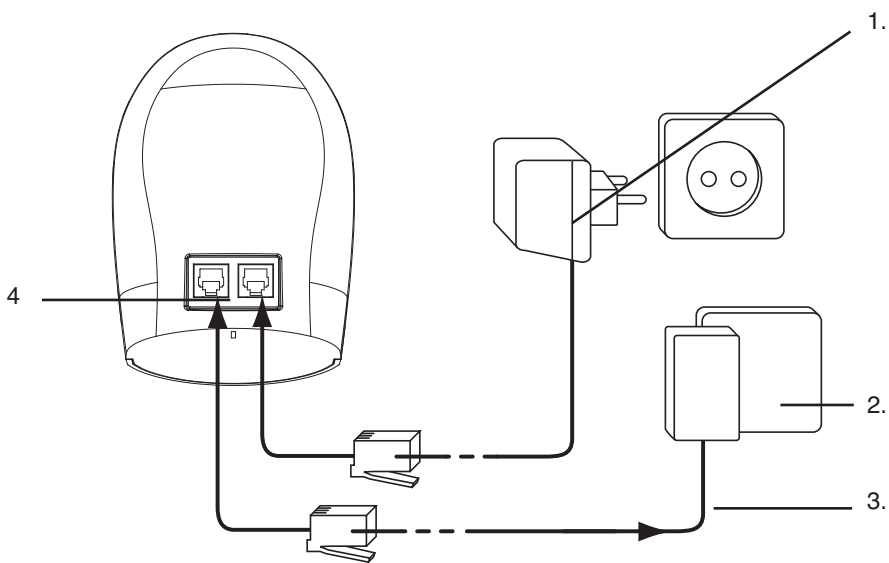

1. Power cable
2. Telephone wall outlet
3. Telephone cord
4. Back view of BASE Cocoon 510

 
6.2 RECHARGEABLE BATTERIES



Before you use your Cocoon 510 for the first time, you must first make sure that the batteries are charged for 6-8 hours. The telephone will not work optimally if not properly charged

To change or insert a rechargeable battery:

1. Slide the cover towards the bottom and then lift it up.
2. Insert the batteries **respecting the (+ and -) polarity**.
3. Replace the battery cover.

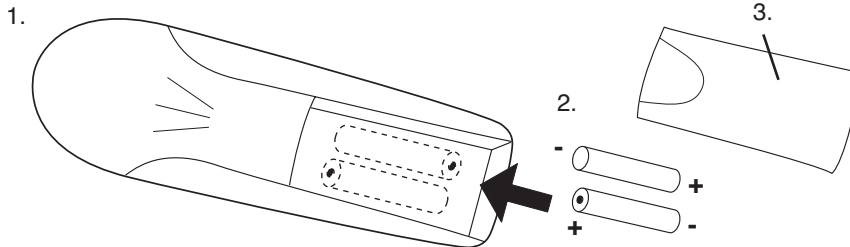

1. Back view of hand-set
2. Rechargeable Batteries
3. Cover

 


Note: The maximum standby time of the batteries is approx. 100 hours and the maximum talk time is 10 hours! In the course of time the batteries will start to drain faster. The batteries must be replaced. You can buy new batteries from any DIY outlet (2 rechargeable batteries, type AAA NiMH)!

7. USING THE TELEPHONE

7.1 CHOOSING MENU LANGUAGE

1. Enter the menu by pressing \Rightarrow /OK
2. Select HANDSET using the up \blacktriangle and down \blacktriangledown keys
3. Press \Rightarrow /OK
4. Select LANGUAGE using the up \blacktriangle and down \blacktriangledown keys
5. Press \Rightarrow /OK
6. Select the language of choice by means of the up \blacktriangle and down \blacktriangledown keys.
7. Press \Rightarrow /OK to validate



7.2 HANDSET ON/OFF

- Turn ON handset: Press **⏻** for 2 sec. The handset will search the base.
- Turn OFF handset: Press **⏻** for 3 sec. The display will go OFF.

7.3 RECEIVING A CALL

When the handset rings, press **📞** to answer. You are then connected to your correspondent. If the hand-set is on the base when the telephone rings, you just need to pick up the handset to answer the call (if the option autoanswer is activated: See 8.9. Automatic answer).

If you press **📞** when the telephone rings, you answer the call automatically and activates the handfree mode.

7.4 MAKING AN EXTERNAL CALL

7.4.1 Normal:

1. Press **📞**
2. Enter telephone number

7.4.2 Block dialling:

1. Dial your correspondents number
2. Press **📞**

To correct a number use the **⌫** key to delete an entered digit

7.5 MAKING AN INTERNAL CALL

Only possible when more then one handsets are registered to the base!!

1. Press INT
2. Enter the number of the internal handset (1 to 2)

7.6 HANDSFREE MODE

You can speak with your correspondent without picking up the handset.

To activate or deactivate the hands free mode, press the **📞** key during a call.

To adjust the volume, refer to the chapter 8.1 " Personalisation "- adjusting speaker volume.

7.7 INTERNAL CALL TRANSFER

Only possible when more then one handset are registered to the base!!

When you want to transfer an external call to another handset:

1. During a conversation, press INT
2. Select the number of the internal handset, the external caller is put on hold.
3. When the other handset picks up, press **📞** to hang up and transfer the call.


If the internal correspondent does not pick-up, press INT again to reconnect to the external caller on line.

7.8 DISPLAY OF CALL DURATION

The call duration is displayed after 15 seconds, in minutes - seconds, : "00-20"
At the end of each call, the total call duration is displayed for 5 seconds.


7.9 MICROPHONE MUTE

It is possible to mute the microphone during a conversation.

Press  during the conversation, the microphone is then deactivated, you can talk freely without being heard by the calling party.

"MUTE" is displayed. Press  again to return to normal mode.

7.10 PAUSE KEY

When dialling a number you can add a pause between two digits by pressing the redial/pause  key for 2s.

7.11 CALLER IDENTIFICATION

Caller identification is only available if you have subscribed to this service with your telephone operator.

When you receive an external call, the callers number will appear on the display as the telephone rings.

If the network sends it, or if the name of the caller is in the address book, the caller is identified by his or her name.






The caller identity is replaced by the call duration after 15 seconds in communication. It is still possible to display the caller's identity after this time by pressing OK-key repeatedly for the name and number.

7.11.1 List of calls


Your telephone keeps a list in memory of the last 30 calls received. This function is only available if your are subscribed to the caller ID information. The correspondents that have called are identified by their telephone number or name in the same way as in caller identification.

The presence of new / unanswered calls is indicated by the flashing -icon on the display.

To consult the list of calls:

1. Press . If there are no calls in the list 'EMPTY' will appear.
2. Scroll through the calls using the up  or down  arrows. The callers names will be shown if the name is send by the network or is stored in the phonebook. When  is shown, this call is been aswered. When  is shown, the call is unanswered. If you are at the end of the list you will hear a beep tone.
3. If you press OK, the telephone number will be shown. Note: if the telephone number is longer then 12 digits, press OK again to see the complete number.
4. Press OK again to see the time and date when the call is received**
5. Pressing OK again will give you the option to add this entry in the phonebook if it's not already stored:
 - Press OK when 'ADD' is shown on the display. Enter or modify the name and press OK. Enter or modify the telephonenumber and press OK. Select the melody (1-3)

which will be heard when this number is calling by means of the up/down keys and press OK. The entry will be stored in the phonebook.




6. To call back a correspondent, simply press the key  when their telephone number or name are displayed.

If a caller is in the phonebook, they are identified by their name in the list of calls.

**** ONLY WHEN THE NETWORK SEND THE TIME/DATE TOGETHER WITH THE TELEPHONE NUMBER!!! On networks with caller ID in DTMF, no time and date will be displayed.**

7.11.2 Delete an entry or all entries in the call list





You can delete each entry separately or all entries at ones:



- When scrolling through the calls, press:
 - the mute key  short to delete this entry only. DELETE appears on the screen.
 - the mute key  long (2 sec.) to delete all entries: DELETE ALL appears on the screen.
- Press OK to delete current/all entr(y)(ies), or  to cancel the delete operation.

7.12 REDIAL MEMORY

Your telephone keeps a list of the 5 last calls (of 20 digits) you have made in memory; The correspondents called are identified by their telephone number or by their name if they appear in the phonebook.





7.12.1 To consult the redial list:


1. Press .
2. Scroll through the calls with the up  and down  arrows.
3. To call by the selected correspondent, simply press  when their telephone number or name is displayed.

 **Note: When name is displayed, you can toggle between name and number by pressing the /OK key!**

7.13 CALLING FROM THE PHONEBOOK

To call a correspondent whose name you have saved in the phonebook:

1. Press  to enter the phonebook
2. Press the first letter of the name. The first name that starts with this letter or the nearest letter in the alphabet will be displayed.
3. Go through the list of names with the up  and down  keys. The list scrolls in an alphabetical order.
4. Press  to dial the number of the correspondent whose name is displayed.

To see the number before dialling, carry out steps 1 to 3 from before and press /OK.

7.14 USING THE ALPHANUMERICAL KEYPAD

With your telephone you can also enter alphanumeric characters. This is useful for entering a name into the phonebook, giving a name to a hand-set, ...

To select a letter, press the corresponding key as many times as is necessary. For example to select an 'A', press '2' once, to select a 'B', press '2' twice and so on. To select 'A' and then B consecutively, select 'A', wait until the cursor moves on to the next character, then press '2' twice.

To select a space, press 1.

To select a dash, press '1' twice.

The keypad characters are as follows:

Key	First press	Second press	Third press	Fourth press	Fifth press
1	space	-	1		
2	A	B	C	2	
3	D	E	F	3	
4	G	H	I	4	
5	J	K	L	5	
6	M	N	O	6	
7	P	Q	R	S	7
8	T	U	V	8	
9	W	X	Y	Z	9

7.15 USING THE MENU

A wide range of telephone functions are accessible through a user friendly menu.

1. To enter the menu, press /OK
2. Scroll through the selections using the up and down keys, the selections scroll in a loop (you return to the first after the last). The arrows on the right of the display indicate that there are other possible selections to scroll through
3. To validate a selection, press /OK
4. To return to the previous menu, press .

 
8. PERSONALISATION



Note: Every programming is confirmed at the end by a double or single long beep. A double beep confirms the validation of your choice. A long beep signifies that the modification has not been taken into account.

8.1 SPEAKER VOLUME DURING CALL

During conversation, press the up or down key to change the volume accordingly.



Note: The handsfree volume is also adjust together with the receiver in the handset as above described .

8.2 ADJUSTING THE RING VOLUME

8.2.1 Handset ringvolume External/internal calls

The handset ringvolume for internal or external calls can be set separately:

1. Enter the menu by pressing \rightarrow /OK
2. Select HANDSET using the up \blacktriangle and down \blacktriangledown keys
3. Press OK
4. Select INT RING VOL or EXT RING VOL using the up \blacktriangle and down \blacktriangledown keys
5. Press OK
6. Select the desired volume (OFF or 1 to 3)
7. Press OK to confirm or \rightarrow to return to the previous menu.

8.2.2 Base ring

1. Enter the menu by pressing \rightarrow /OK
2. Select SETUP using the up \blacktriangle and down \blacktriangledown keys
3. Press \rightarrow /OK
4. Select BASE VOLUME using the up \blacktriangle and down \blacktriangledown keys
5. Press \rightarrow /OK
6. Select the desired volume (OFF or 1 to 3)
7. Press \rightarrow /OK to confirm or \rightarrow to return to the previous menu.

8.3 CHOOSING THE RING MELODY

The base and each handset can ring with a different melody.

The handsets can ring with a different melody according to whether the incoming call is internal or external.

8.3.1 Base melody

1. Enter the menu by pressing \rightarrow /OK
2. Select SETUP using the up \blacktriangle and down \blacktriangledown keys
3. Press \rightarrow /OK
4. Select BASE MELODY using the up \blacktriangle and down \blacktriangledown keys
5. Press \rightarrow /OK
6. Select the melody of your choice (1 to 3) using the up \blacktriangle and down \blacktriangledown keys
7. Press \rightarrow /OK to confirm or \rightarrow to return to the previous menu.

8.3.2 Handset melody, external call

1. Enter the menu by pressing \rightarrow /OK
2. Select HANDSET using the up \blacktriangle and down \blacktriangledown keys
3. Press \rightarrow /OK
4. Select EXT MELODY using the up \blacktriangle and down \blacktriangledown keys
5. Press \rightarrow /OK





6. Select the melody of your choice (1 to 3) using the up ▲ and down ▼ keys
7. Press ↵/OK to confirm or ⏪ to return to the previous menu.

8.3.3 Handset melody, internal call

1. Enter the menu by pressing ↵/OK
2. Select HANDSET using the up ▲ and down ▼ keys
3. Press ↵/OK
4. Select INT MELODY using the up ▲ and down ▼ keys
5. Press ↵/OK
6. Select the melody of your choice (1 to 3) using the up ▲ and down ▼ keys
7. Press ↵/OK to confirm or ⏪ to return to the previous menu.

8.4 ACTIVATION / DEACTIVATION OF BEEPS

The handsets can emit beep tone when a key is pressed, when the batteries are low or when the handset is out of range.

8.4.1 Key pressed beep tone on/off

1. Enter the menu by pressing ↵/OK
2. Select HANDSET using the up ▲ and down ▼ keys
3. Press ↵/OK
4. Select BEEP using the up ▲ and down ▼ keys
5. Press ↵/OK
6. Select KEYTONE using the up ▲ and down ▼ keys
7. Press ↵/OK
8. Select ON to activate, OFF to deactivate
9. Press ↵/OK to confirm.

8.4.2 Low battery

Proceed as before, but select at point 6 "LOW BATT" instead of "KEYTONE".

8.4.3 Handset out of range

 
 
Proceed as before, but select at point 6 "OUTRANGE" instead of "KEYTONE".

 
8.5 HANDSET NAME

This function allows you to personalise each handset.

1. Enter the menu by pressing ↵/OK
2. Select HANDSET using the up ▲ and down ▼ keys
3. Press ↵/OK
4. Select NAME using the up ▲ and down ▼ keys
5. Press ↵/OK
6. Enter the name
7. Press ↵/OK to validate

While entering the name, press ⌫ to delete a character and press and hold ⏪ to exit the menu without taking any modifications into account





8.6 CHANGING THE PIN CODE

Certain functions are only available to users who know the PIN code. By default this is PIN code = 0000.

To change the PIN code:

1. Enter the menu by pressing \rightarrow /OK
2. Select SETUP using the up \blacktriangle and down \blacktriangledown keys
3. Press \rightarrow /OK
4. Select pin code using the up \blacktriangle and down \blacktriangledown keys
5. Press \rightarrow /OK
6. Enter the old 4 figure PIN code.
7. Press \rightarrow /OK
8. Enter the new 4 figure PIN code
9. Press \rightarrow /OK
10. Enter the new PIN code a second time
11. Press \rightarrow /OK to validate

8.7 SETTING THE DIALLING MODE

8.7.1 There are two types of dialling mode:

- DTMF/Tone dialling (the most common)
- Pulse dialling (for older installations)

8.7.2 To change the dialling mode:

1. Enter the menu by pressing \rightarrow /OK
2. Select SETUP using the up \blacktriangle and down \blacktriangledown keys
3. Press \rightarrow /OK
4. Select DIALMODE using the up \blacktriangle and down \blacktriangledown keys
5. Press \rightarrow /OK
6. Select the dialling mode using the up \blacktriangle and down \blacktriangledown keys
7. Press \rightarrow /OK to validate

8.8 FLASH TIME DURATION

1. Enter the menu by pressing \rightarrow /OK
2. Select SETUP using the up \blacktriangle and down \blacktriangledown keys
3. Press \rightarrow /OK
4. Select RECALL using the up \blacktriangle and down \blacktriangledown keys
5. Choose RECALL 1 for short flash time (100ms) or RECALL 2 for long flash time (250ms)

8.9 AUTOMATIC ANSWER

When there is a incoming call and the handset in on the base, the phone automatically takes the line when lifted. This is the default setting, but can be set OFF:

- 1 Enter the menu by pressing \rightarrow /OK
- 2 Select HANDSET using the up \blacktriangle and down \blacktriangledown keys
- 3 Press \rightarrow /OK

Cocoon 510

- 4 Select Auto ans using the up ▲ and down ▼ keys
- 5 Select ON (for automatic answer) or OFF
- 6 Press ↵/OK

8.10 RESET

It is possible to return the phone to the original default configuration. This is the configuration which was installed when you first received the telephone.

To return to default settings:

1. Enter the menu by pressing ↵/OK
2. Select SETUP using the up ▲ and down ▼ keys
3. Press ↵/OK
4. Select DEFAULT using the up ▲ and down ▼ keys
5. Press ↵/OK
6. Enter the 4 digit PIN code (default =0000)
7. Press ↵/OK to validate.



WARNING! Returning to default settings will delete all entries in the phonebook and call log. The PIN code will also be reset to 0000.

8.11 KEYPAD LOCK

The keypad can be locked so that no settings can be changed or no telephone number can be dialed. The ☞-icon will appear on the screen when keypad is locked.

8.11.1 Locking the keypad by Menu

 
- 1 Enter the menu by pressing ↵/OK
- 2 Select HANDSET using the up ▲ and down ▼ keys
- 3 Press OK
- 4 Select KEY LOCK? using the up ▲ and down ▼ keys
- 5 Press OK to lock the keypad

8.11.2 Locking the keypad by the *-key (quick lock)

Press and hold the *-key for 3 seconds. The keypad will be locked.

8.11.3 Unlock the keypad

- 1 Press any key
- 2 PRESS * will appear on the screen
- 3 Press the ** key within 3 seconds to unlock the keypad



9. ADVANCED FUNCTIONS

9.1 PHONEBOOK

The Phonebook allows you to memorise 50 telephone numbers and names. You can enter names of up to 12 characters length and numbers of up to 20 digits length.

To call a correspondent whose number is stored in the phonebook, refer to the section 7.13
To enter alphanumerical characters, refer to the section 7.14.


9.1.1 Add an entry into the phonebook

1. Enter the menu by pressing ↵/OK
2. Select PHONE BOOK using the up ▲ and down ▼ keys
3. Press OK
4. Select ADD ENTRY using the up ▲ and down ▼ keys
5. Press OK
6. Enter the name
7. Press OK to validate.
8. Enter the telephone number
9. Press OK to validate
10. Select the desired melody (1-3) by means of the up/down key
11. Press OK to Validate

9.1.2 Modify a name or number

To modify a number in the phonebook:

 
1. Enter the menu by pressing ↵/OK
2. Select PHONE BOOK using the up ▲ and down ▼ keys
3. Press OK
4. Select MODIFY ENTRY using the up ▲ and down ▼ keys
5. Press OK
6. Move through the list of names with the up ▲ and down ▼ keys. The list scrolls in alphabetical order.
7. Press OK when you find the name to modify
8. Use the 'a/c' key to go back and enter the new name
9. Press OK to validate
10. Enter the new telephone number
11. Press OK to validate

Warning, if you enter the Phonebook first with the  key and modify a telephone number with the a/c key, the modification will be taken into account only for this call and will not be stored in the phonebook!

9.1.3 Deleting an entry

To delete an entry:


1. Enter the menu by pressing ↵/OK
2. Select PHONE BOOK using the up ▲ and down ▼ keys
3. Press OK



Cocoon 510

4. Select DELETE ENTRY using the up ▲ and down ▼ keys
5. Press OK
6. Move through the list of names using the up ▲ and down ▼ keys the list scrolls in alphabetical order.
7. Press OK when you find the name you wish to delete
8. CONFIRM appears, press OK to confirm or ⏏ to stop.

9.2 SEARCHING A HANDSET FROM THE BASE

When the paging button  on the base is pressed all the handsets will ring. This ringing will help you locate a lost handset. By simply pressing one of the handset keys the ringing stops.


10. MANAGING MULTIPLE HANDSETS

10.1 SETTING UP AN ADDITIONAL HANDSET

You can register new handsets on the base if these handsets support the DECT GAP protocol.

The base can support a maximum of 2 handsets. If you already have 2 handsets, and you wish to add another one or change one handset, you must first delete a handset, then associate the new handset.


To register any handset, the base must be put into a special registration mode:

 
 
1. Press and hold the paging key  of the base for 6 seconds.
2. The base will then emit a beeptone. The base is now ready to register a new handset.

You have 90 seconds after pressing the button to register a new handset.

After putting the base into registration mode, start the procedure on the new handset:


if your additional handset is a Cocoon 510C

3. Enter the menu by pressing /OK
4. Select REGISTER using the up ▲ and down ▼ keys
5. Press OK
6. Select REG BASE using the up ▲ and down ▼ keys
7. Enter a base number (from 1 to 4). The flashing numbers are already in use.
8. Enter the Base PIN code (0000 by default)
9. Press OK. The handset will start searching for the DECT base
10. If the handset has located the base, it will display the base identification number, validate the base registration by pressing OK or stop by pressing ⏏.
11. If the handset does not locate the base, it will return to the standby mode after a few seconds.
Try again by changing the base number and check that you are not in a environment where there is interference. Move closer to the base.



if your handset is another model










After starting the registration procedure on the base, refer to the handset manual to find out how to register the handset. The handset must be GAP compatible.

The icon  and the text "NOT REG" flashes on the display when the handset is not associated with the base.

When a handset is associated with a base, it is attributed a handset number by the base. It is this number that is displayed on the handset after the name and must be used for internal calls.

10.2 REMOVING A HANDSET

You can remove a handset with a base to allow another handset to be registered

1. Enter the menu by pressing /OK
2. Select SETUP using the up  and down  keys
3. Press /OK
4. Select DEL HANDSET using the up  and down  keys
5. Press /OK
6. Enter the 4 digit base PIN code
7. Press /OK
8. Select the handset to be removed
9. Press /OK to validate



DECT GAP Profile only guarantees that basic calling-functions will work correctly between different brands/types. There's a possibility that certain services (like CLIP) will not work correctly.

10.3 SETTING UP A HANDSET ON ANOTHER BASE











If you want to use a Cocoon 510 handset with a base of another model. The base must be GAP compatible.

 
1. To put the base in registration mode, refer to the base user manual.
2. Carry out operations 3 to 10 from the paragraph 10.1.

10.4 SELECTING A BASE

The handsets can be registered up to 4 bases simultaneously.

To select a base:


1. Enter the menu by pressing /OK
2. Select REGISTER using the up  and down  keys
3. Press /OK
4. Select SELECT BASE using the up  and down  keys
5. Press /OK
6. Select a base or select AUTO using the up  and down  keys
7. Press /OK





If you select 'Auto' the handset will automatically search for another base when you are out of range!



11. TROUBLE SHOOTING

Symptom	Possible cause	Solution
No display	Batteries uncharged	Check the position of the batteries
		Recharge the batteries
No tone	Handset turned OFF	Turn ON the handset
	Telephone cord badly connected	Check the telephone cord connection
The icon  flashes	The line is occupied by another handset	Wait until the other handset hangs up
	Handset out of range	Bring the handset closer to the base
Base or handset do not ring	The base has no power supply	Check the mains connection to the base
	The handset is not registered on the base	Register the handset on the base
Tone is good, but there is no communication	The ringing volume is zero or low	Adjust the ringing volume
	The dialling mode is wrong	Adjust the dialling mode (pulse/ tone)
Not possible to transfer a call on PABX	The FLASH time is too short	Set the unit to Long Flash time
Telephone does not react to pressing the keys	Manipulation error	Remove the batteries and put them back in place

 

 

12. WARRANTY

12.1 WARRANTY PERIOD

The Ucom units have a 36-month warranty period. The warranty period starts on the day the new unit is purchased. The warranty on batteries is limited to 6 months after purchase. Consumables or defects causing a negligible effect on operation or value of the equipment are not covered.

The warranty has to be proven by presentation of the original purchase receipt, on which the date of purchase and the unit-model are indicated.

12.2 WARRANTY HANDLING

A faulty unit needs to be returned to a Ucom service centre including a valid purchase note. If the unit develops a fault during the warranty period, Ucom or its officially appointed service centre will repair any defects caused by material or manufacturing faults free of charge. Ucom will at its discretion fulfil its warranty obligations by either repairing or exchanging the faulty units or parts of the faulty units. In case of replacement, colour and model can be different from the original purchased unit.

The initial purchase date shall determine the start of the warranty period. The warranty period is not extended if the unit is exchanged or repaired by Ucom or its appointed service centres.

12.3 WARRANTY EXCLUSIONS

 
Damage or defects caused by incorrect treatment or operation and damage resulting from use of non-original parts or accessories not recommended by Ucom are not covered by the warranty.

Ucom cordless phones are designed to work with rechargeable batteries only. The damage caused by the use of non-rechargeable batteries is not covered under warranty.

The warranty does not cover damage caused by outside factors, such as lightning, water and fire, nor any damage caused during transportation.

No warranty can be claimed if the serial number on the units has been changed, removed or rendered illegible.

Any warranty claims will be invalid if the unit has been repaired, altered or modified by the buyer or by unqualified, non-officially appointed Ucom service centres.




Cocoon 510

13. TECHNICAL CHARACTERISTICS

- Standard: DECT (Digital Enhanced Cordless Telecommunications)
GAP (Generic Access Profile)
- Frequency range: 1880 MHz to 1900 MHz
- Number of channels: 120 duplex channels
- Modulation: GFSK
- Speech coding: 32 kbit/s
- Emission power: 10 mW (average power per channel)
- Range: 300 m in open space /50 m maximum inhouse
- Powersupply Basestation: 230V / 50 Hz / 55 mA
6,5V DC - 9V AC 150 mA - Type: W41DA-06515-09015

 - Handset Batteries: 2 rechargeable batteries AAA, NiMh 550mAh
- Handset autonomy: 100 hours in standby
- Talk time: 10 hours
- Charging time: 6-8 hours
- Normal conditions of use: +5 °C to +45 °C
- Dialling mode: Pulse / Tone
- Flash time 100 or 250 ms




14. SERVICE ADDRESS AND SUPPORT



Please see extra paper (Service address and support numbers) or www.ucom.be.







15. DECLARATION OF CONFORMITY AND MANUFACTURER

  
 
Topcom Europe Nv.
Grauwmeer 17
3001 Heverlee
Belgium






       The CE symbol indicates that the unit complies with the essential requirements of the R&TTE directive.







DECLARATION OF CONFORMITY

We, Topcom Europe Nv, Grauwmeer 17, 3001 Heverlee, Belgium, declare that our product :

Model type: UCOM Cocoon 510

is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC and carries the CE mark accordingly.

Supplementary information:

 
 
The product complies with the requirements of:

 
- TBR 21
- EN60950
- EN 301489-6
- TBR 6
- TBR 10
- TBR 22

Date: 06/11/2003
Place: Heverlee, Belgium
Name: Eric Vanderwegen
Function: PRODUCT MANAGER


Signature:

European contact: Topcom Europe Nv, R&D department, Research Park, Grauwmeer 17, 3001 Heverlee, Belgium. Tel : +32 16 398920, Fax : +32 16 398939





Cocoon 510

 

www.ucom.be

U8006283 VEGAXS

